








Curso de iniciación+ máquina.


















Impresión cerámica 3D

INICIACIÓN + MÁQUINA

JETCLAY MINI


MANUAL DE MONTAJE

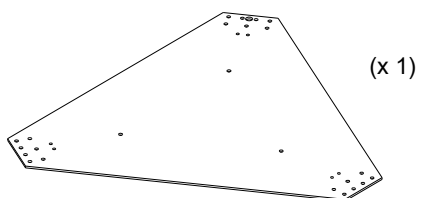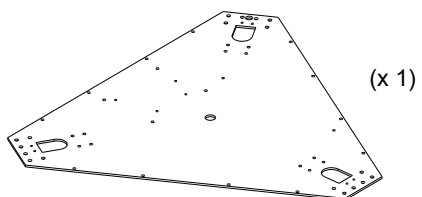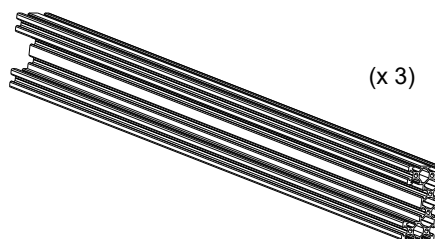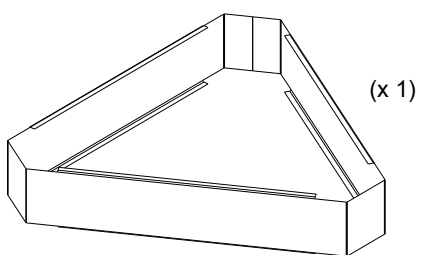
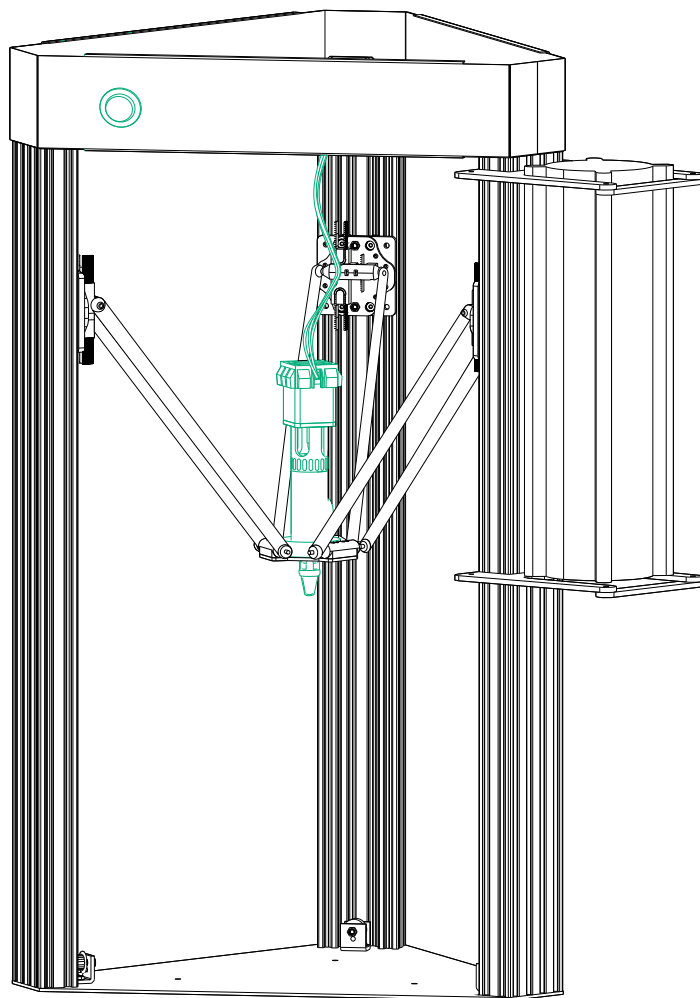


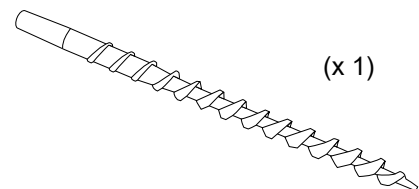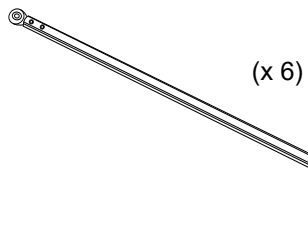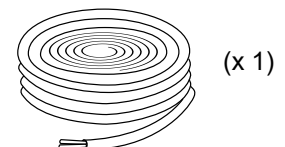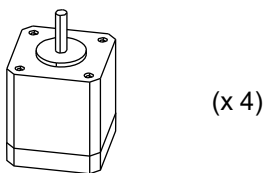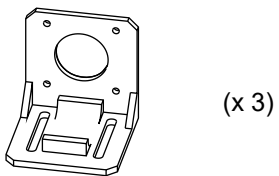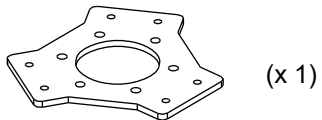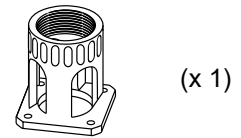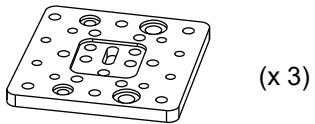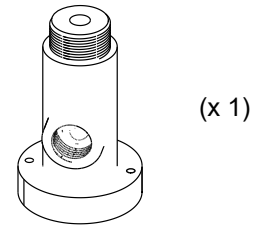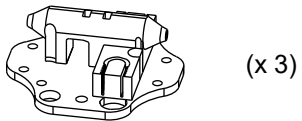


CAP.01


MECÁNICA

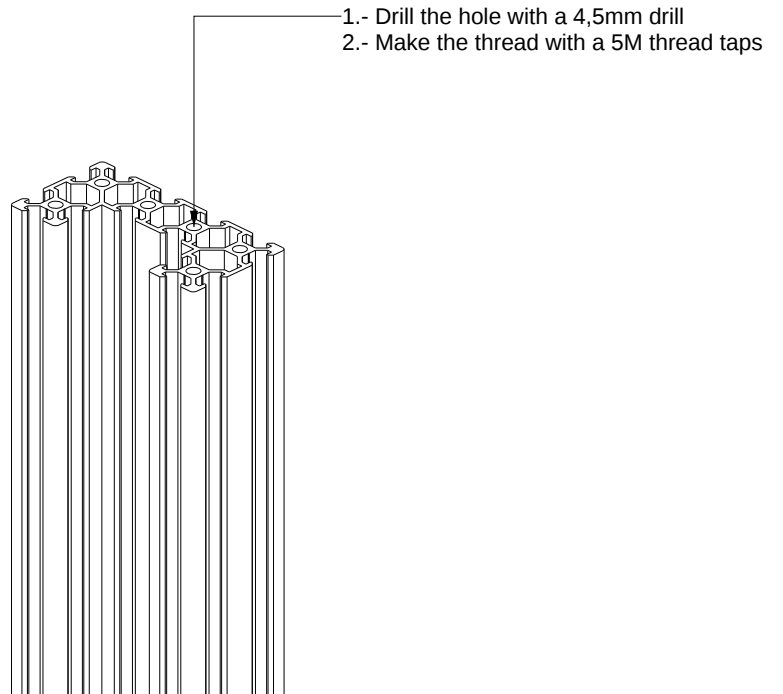


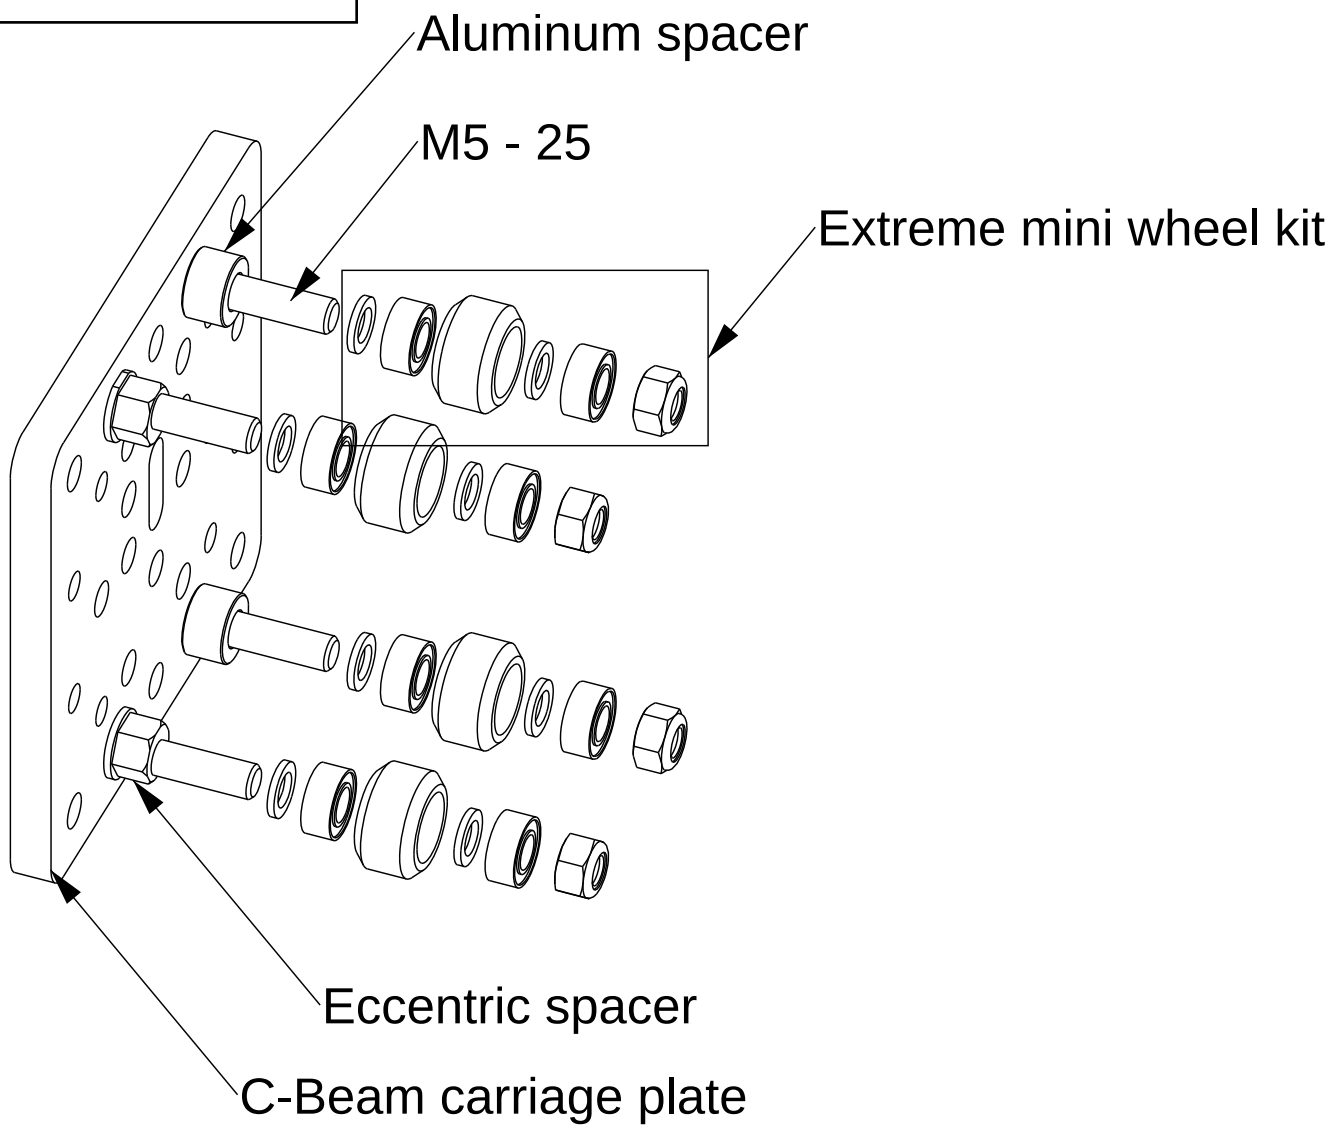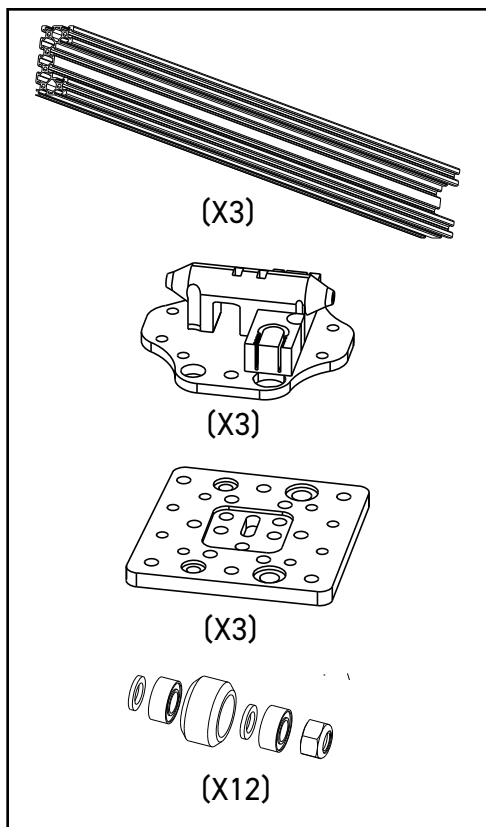




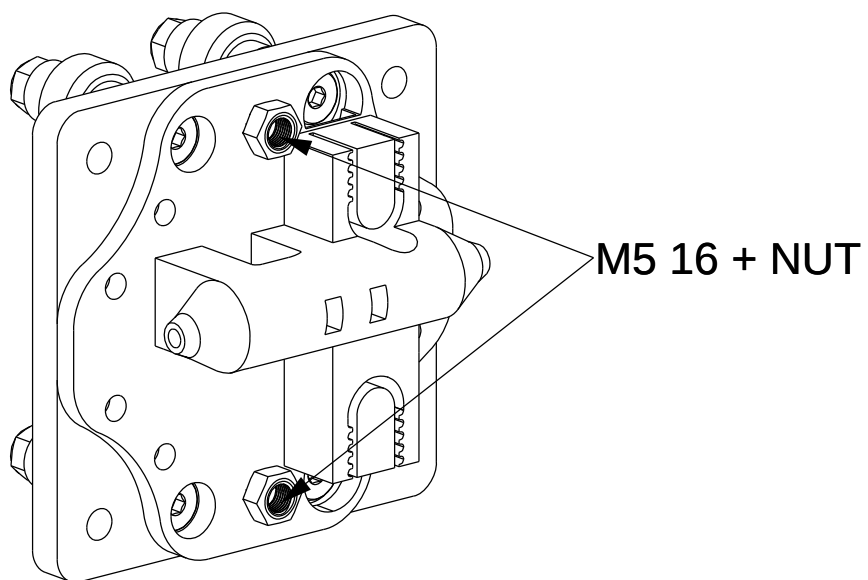



Introduce the Carriage inside the C-Beam
Tighten it using the eccentric nuts


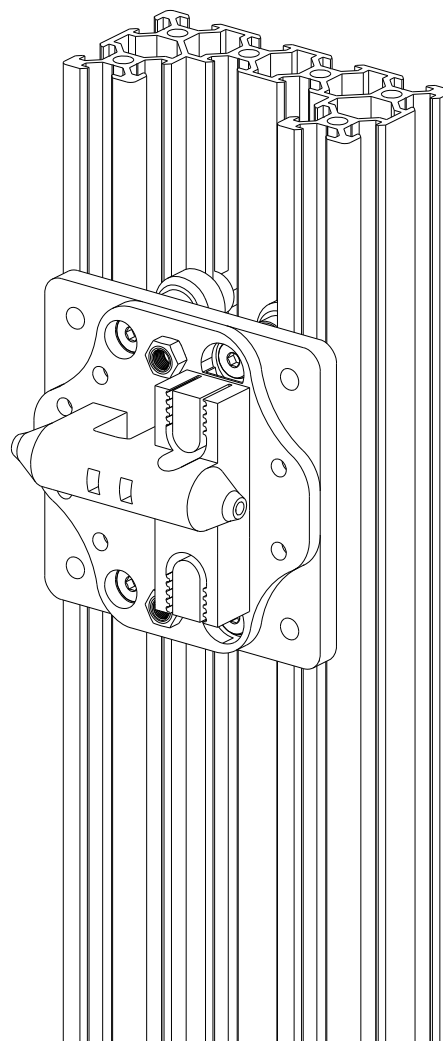


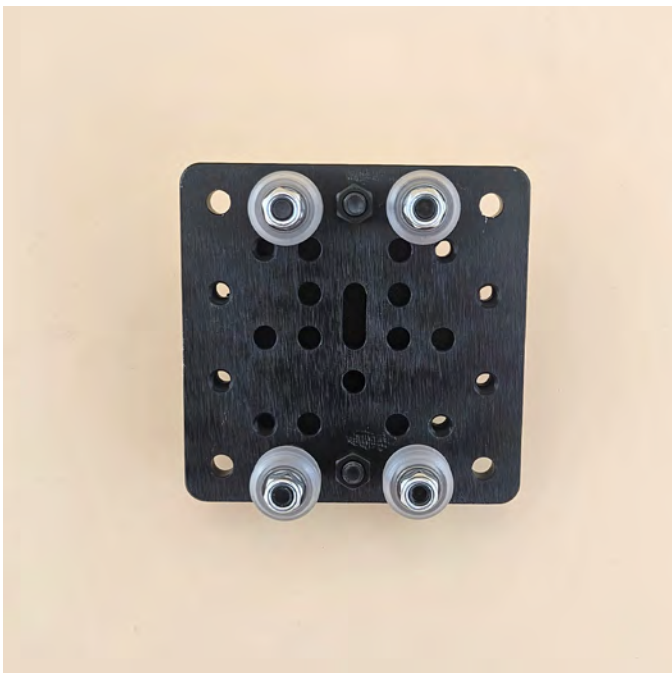



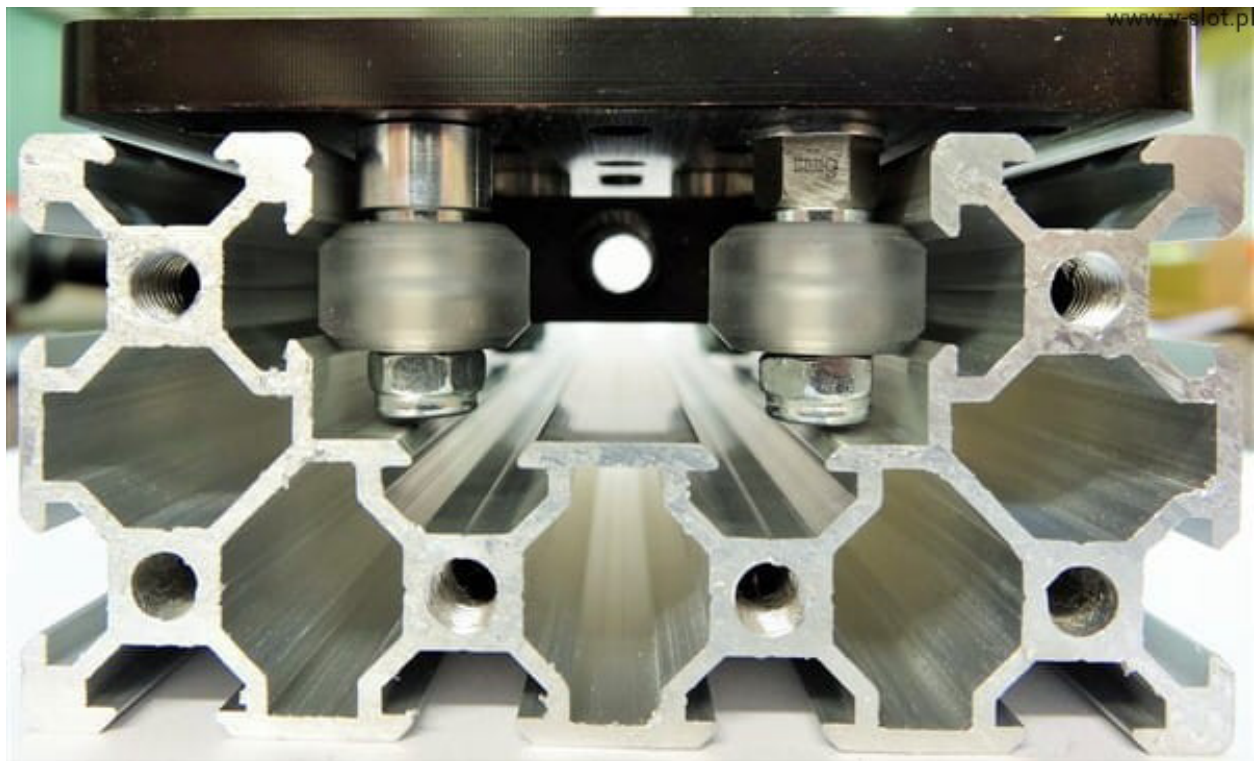


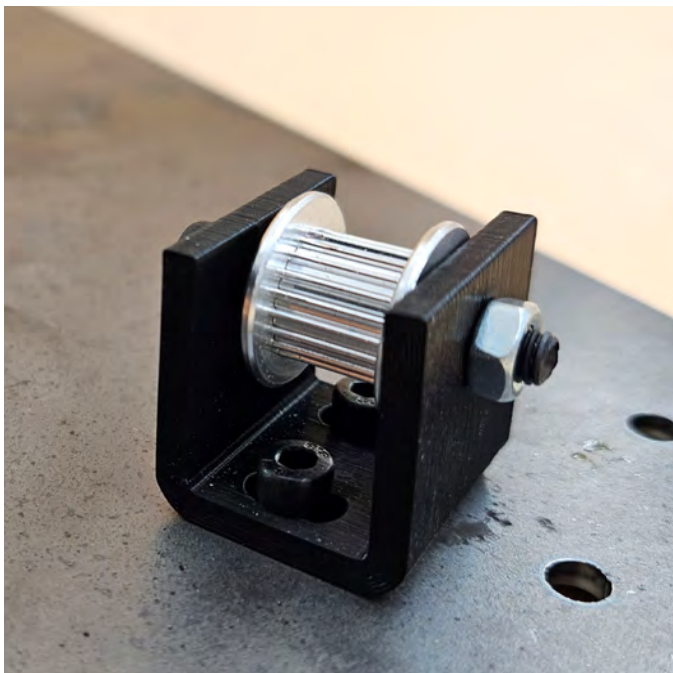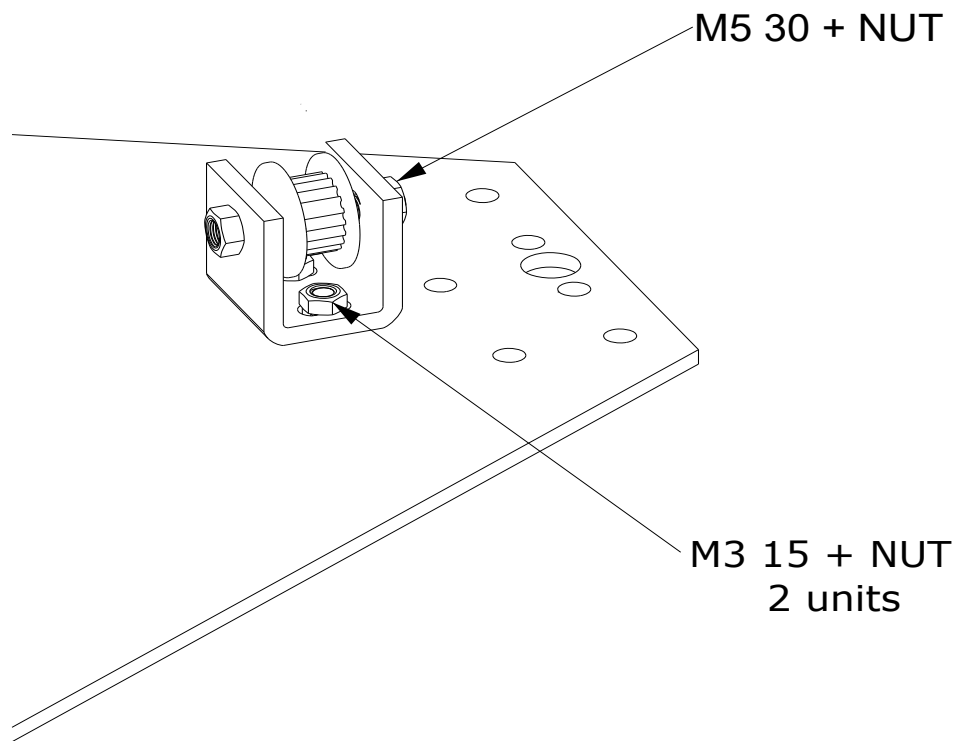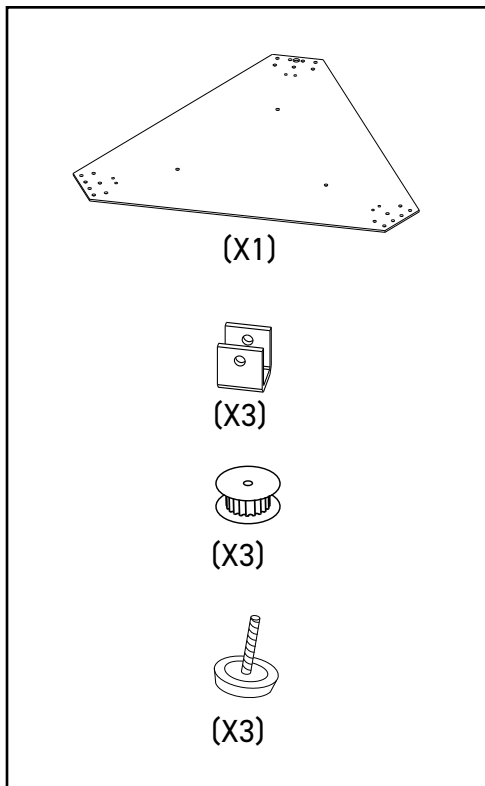


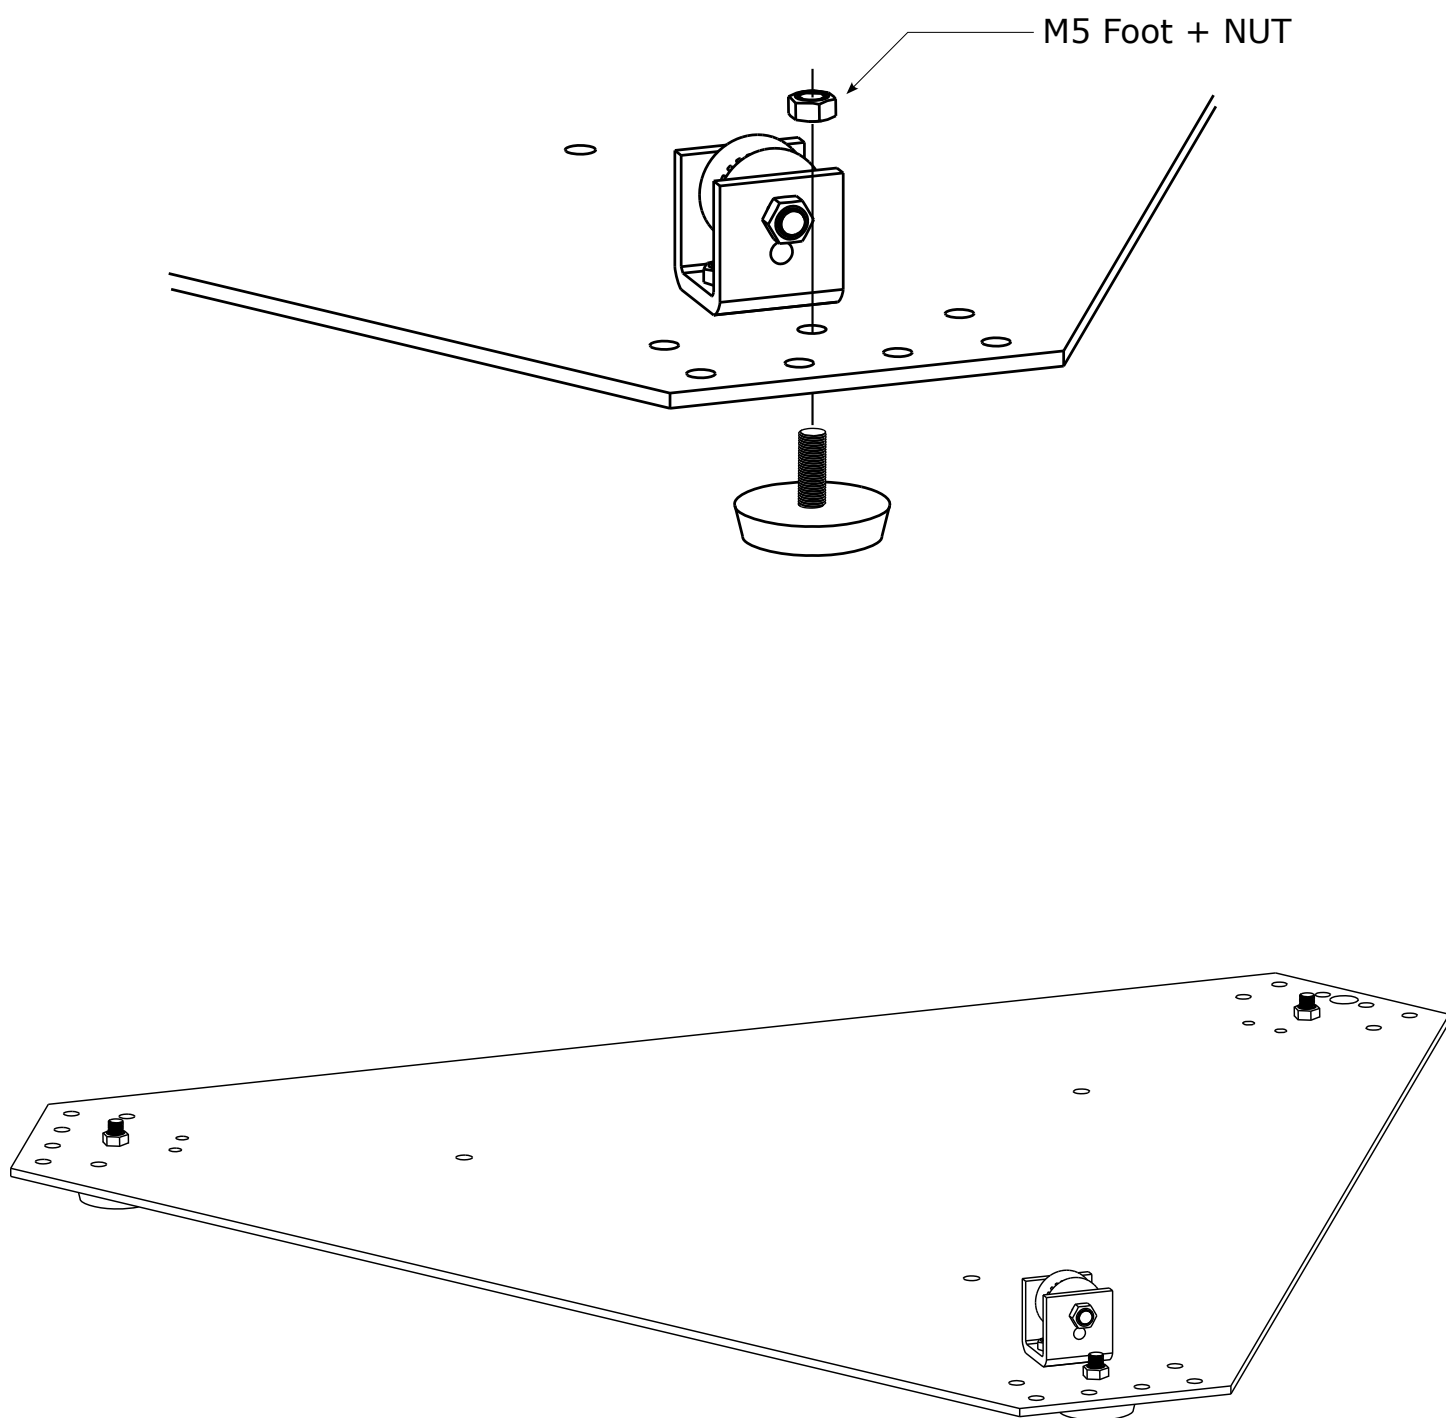

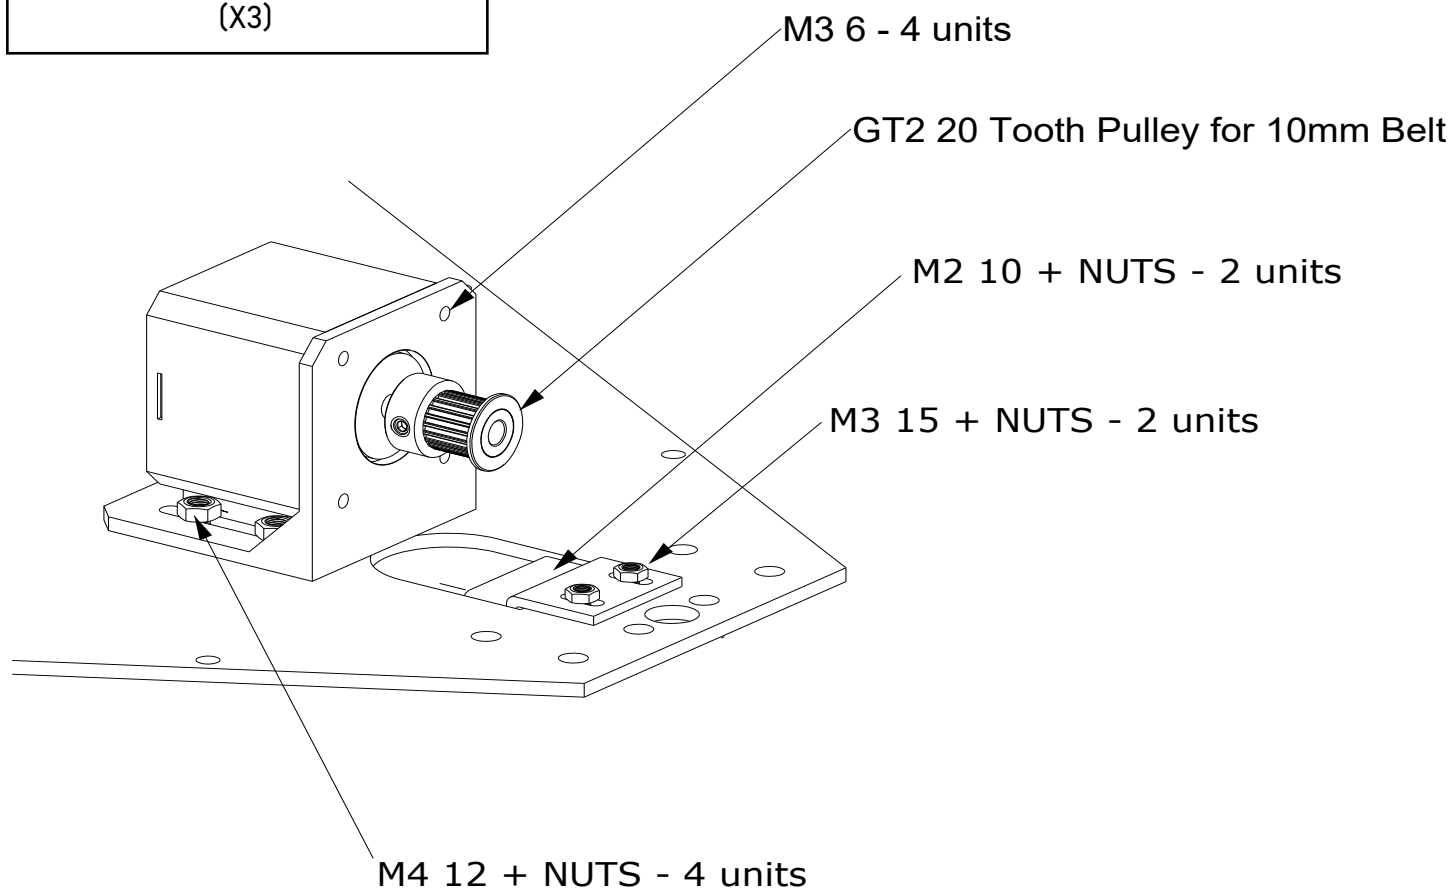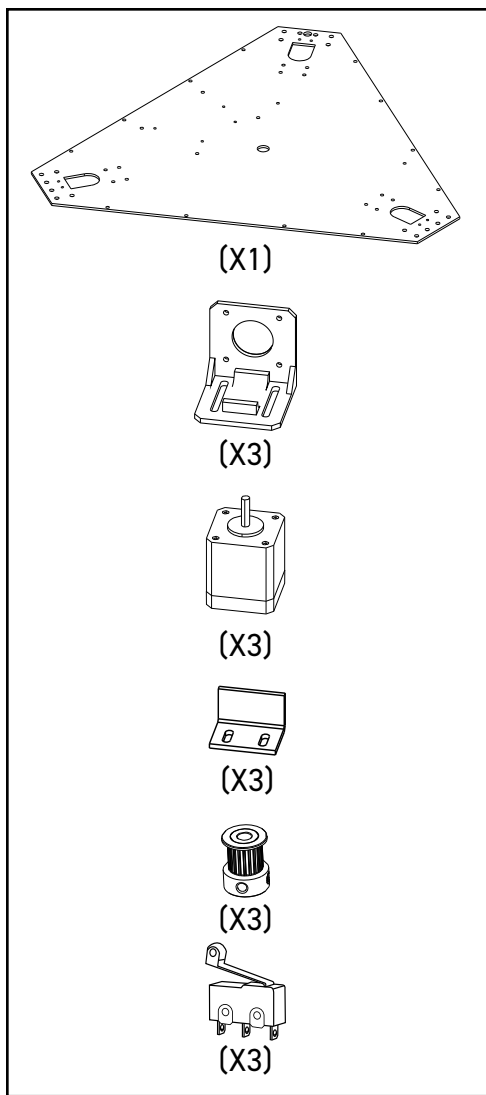


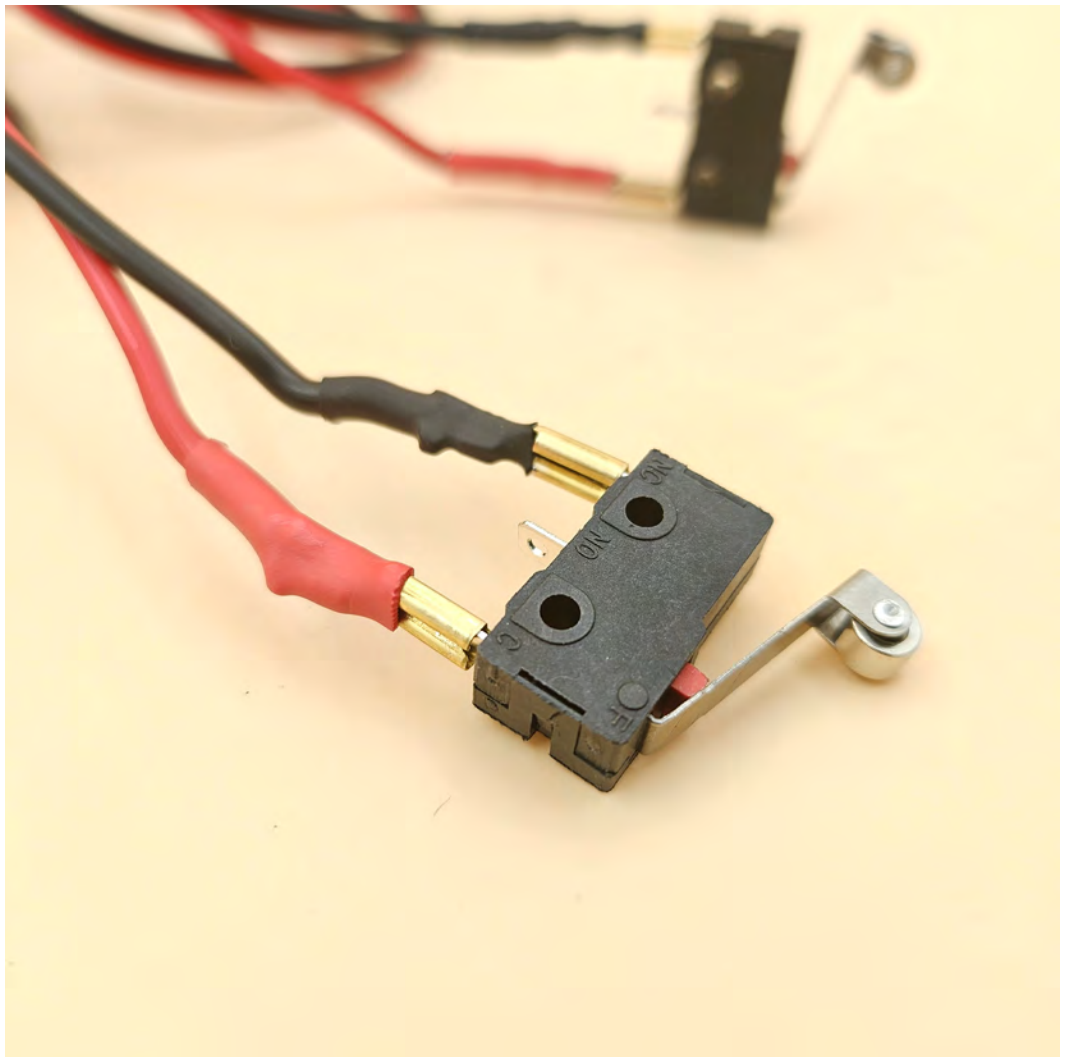


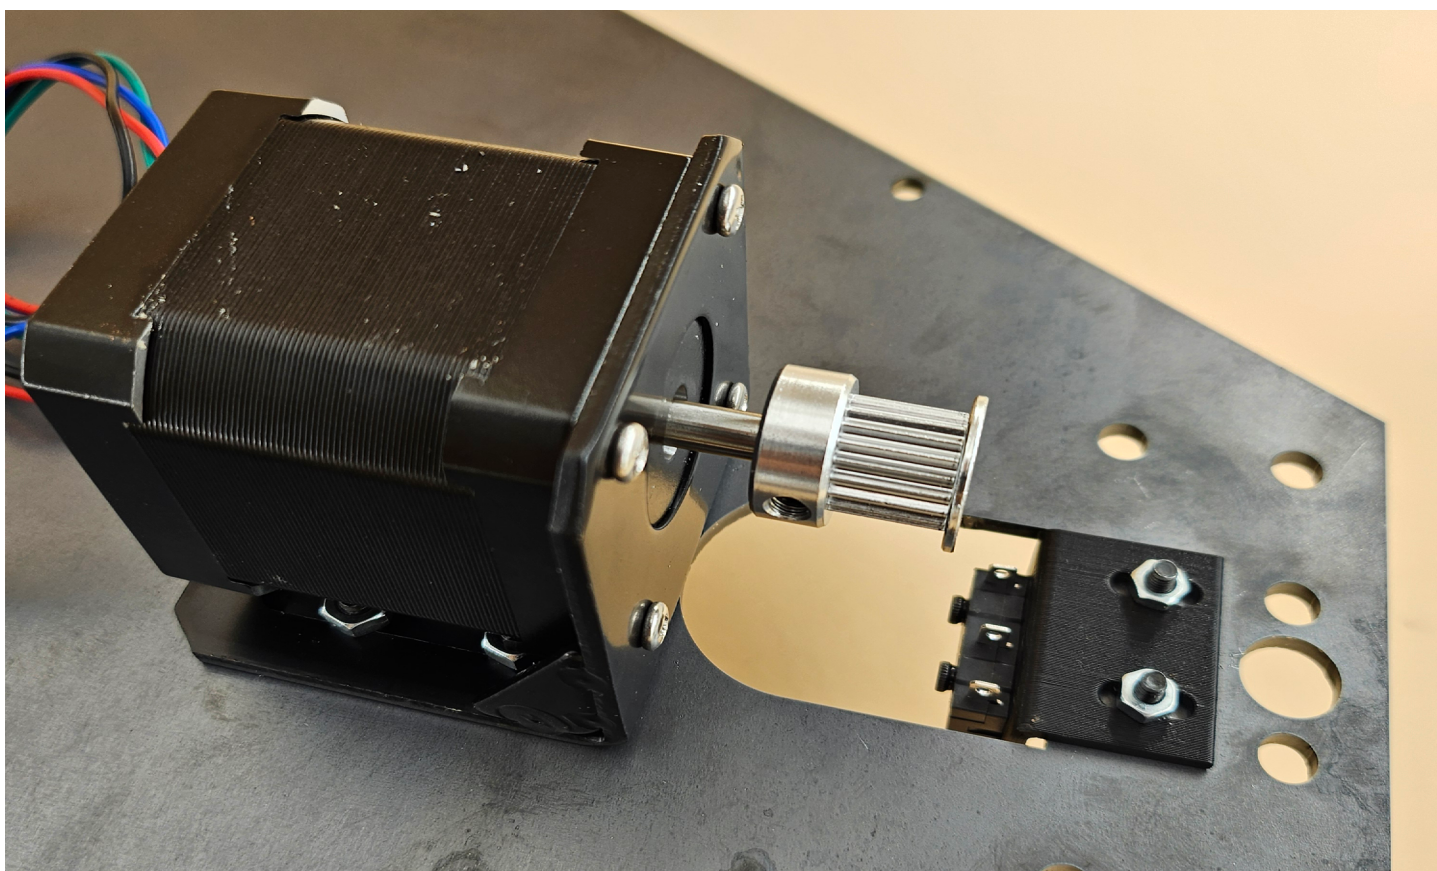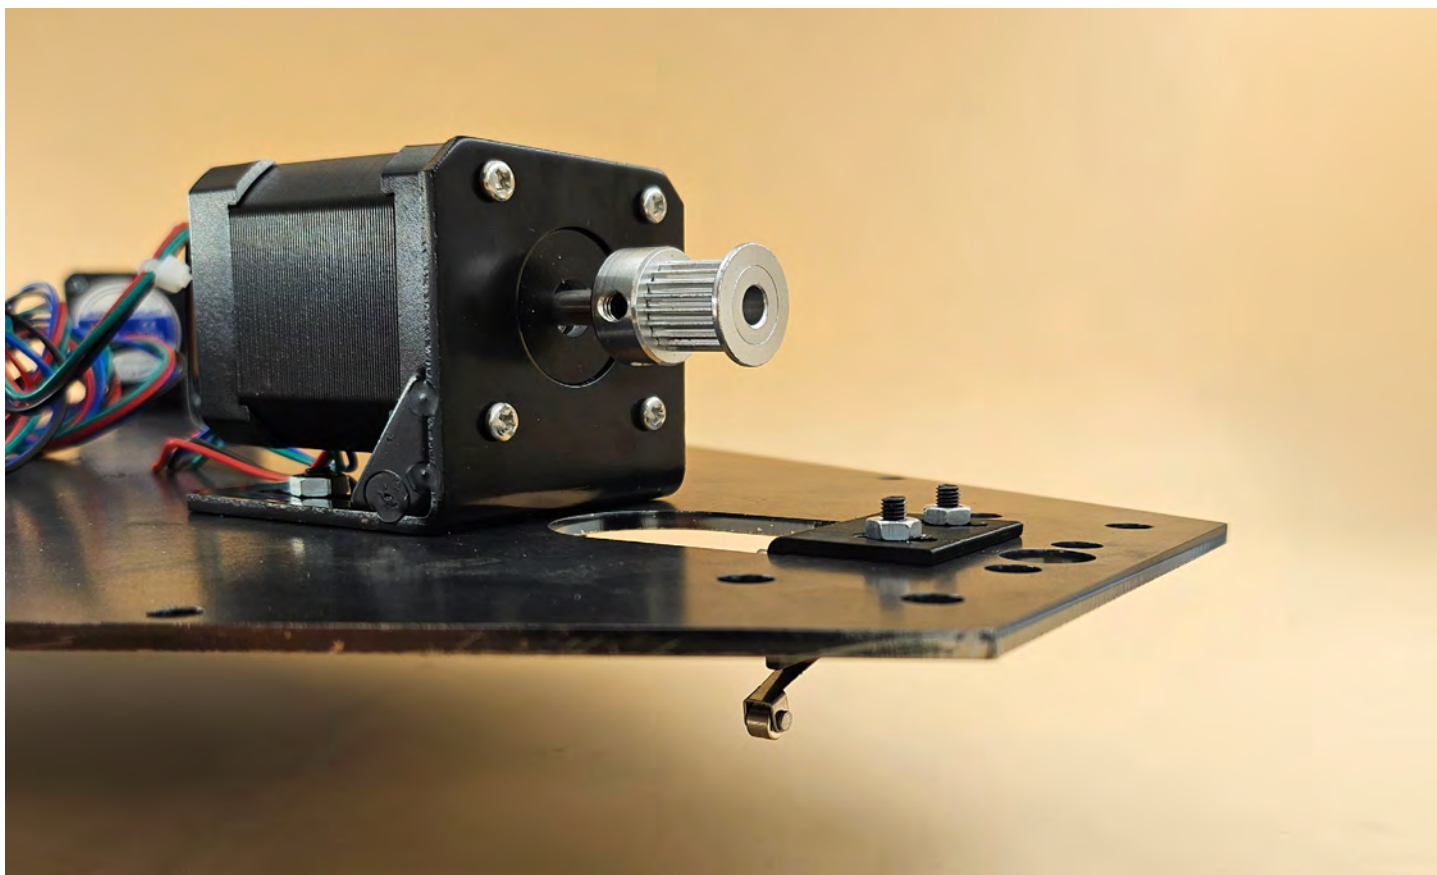

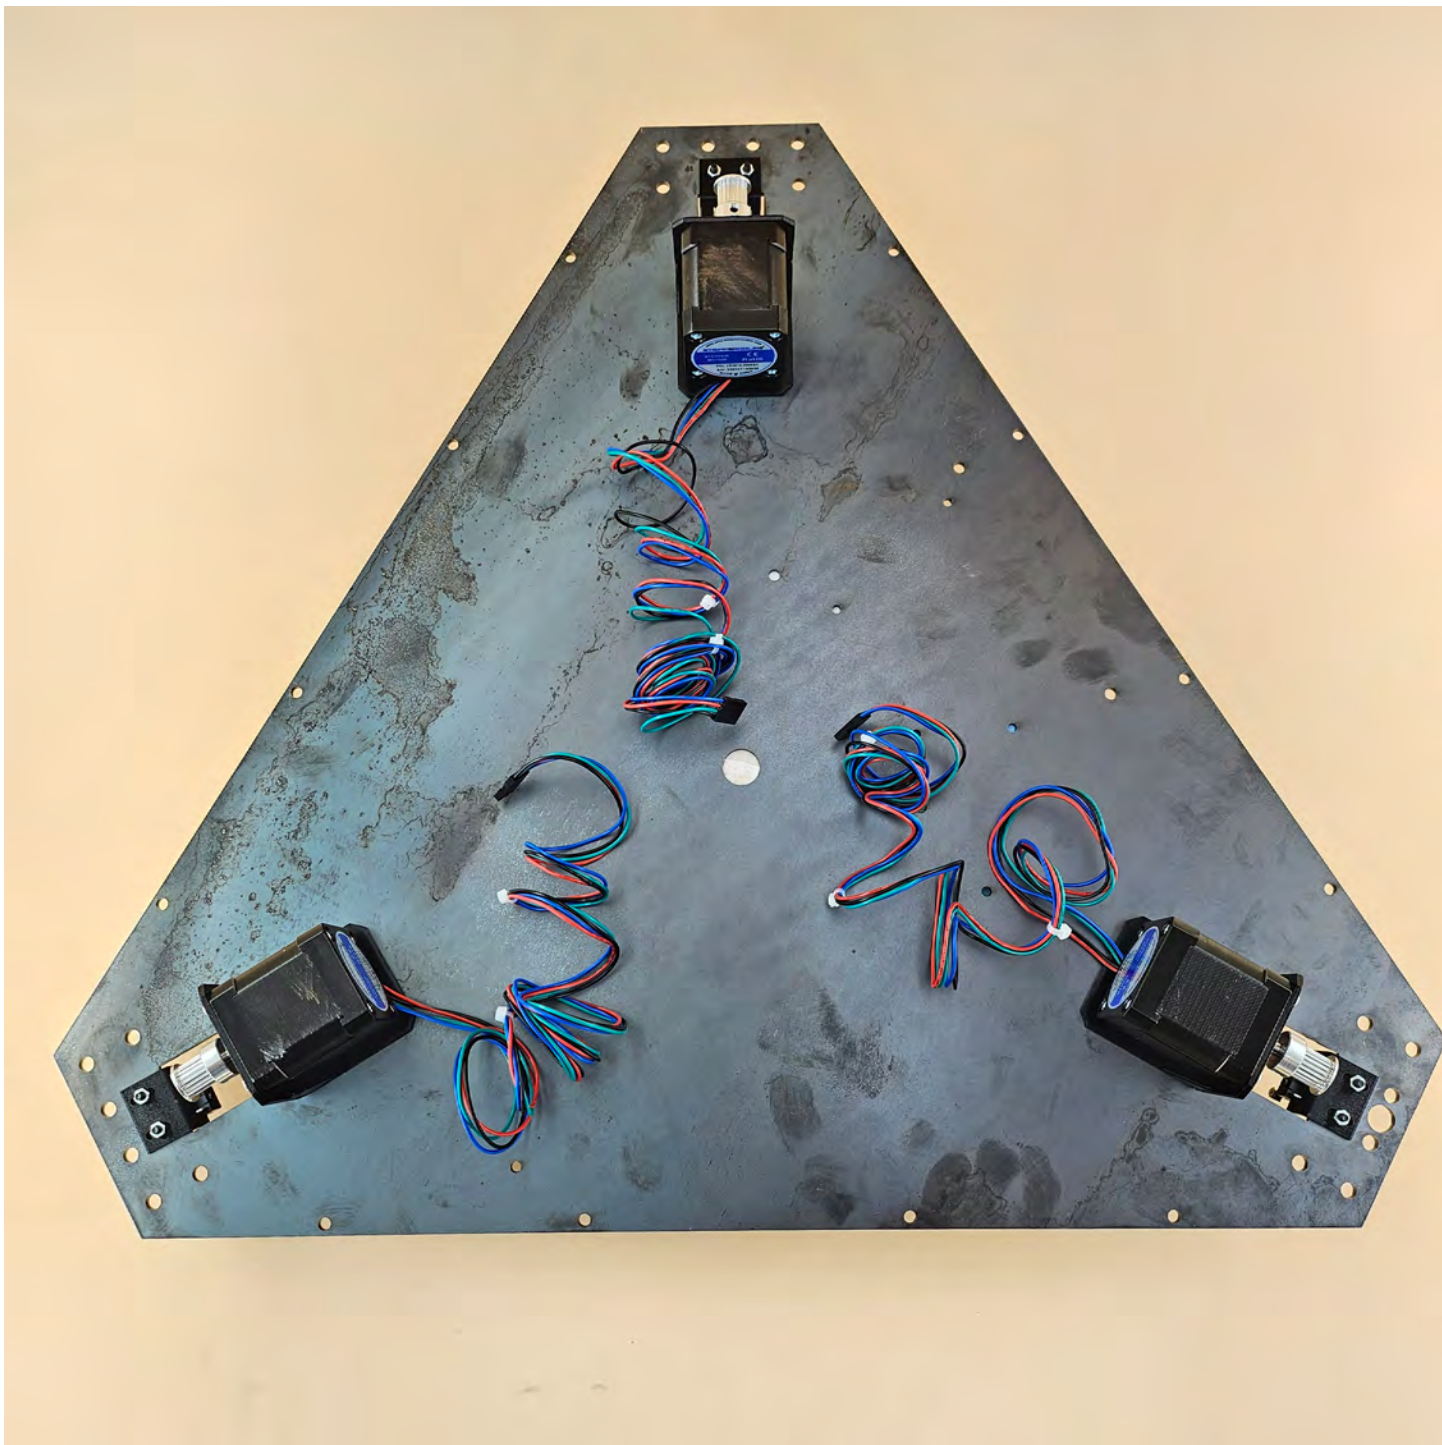


Screw the towers to the plates
Using M5 - 20


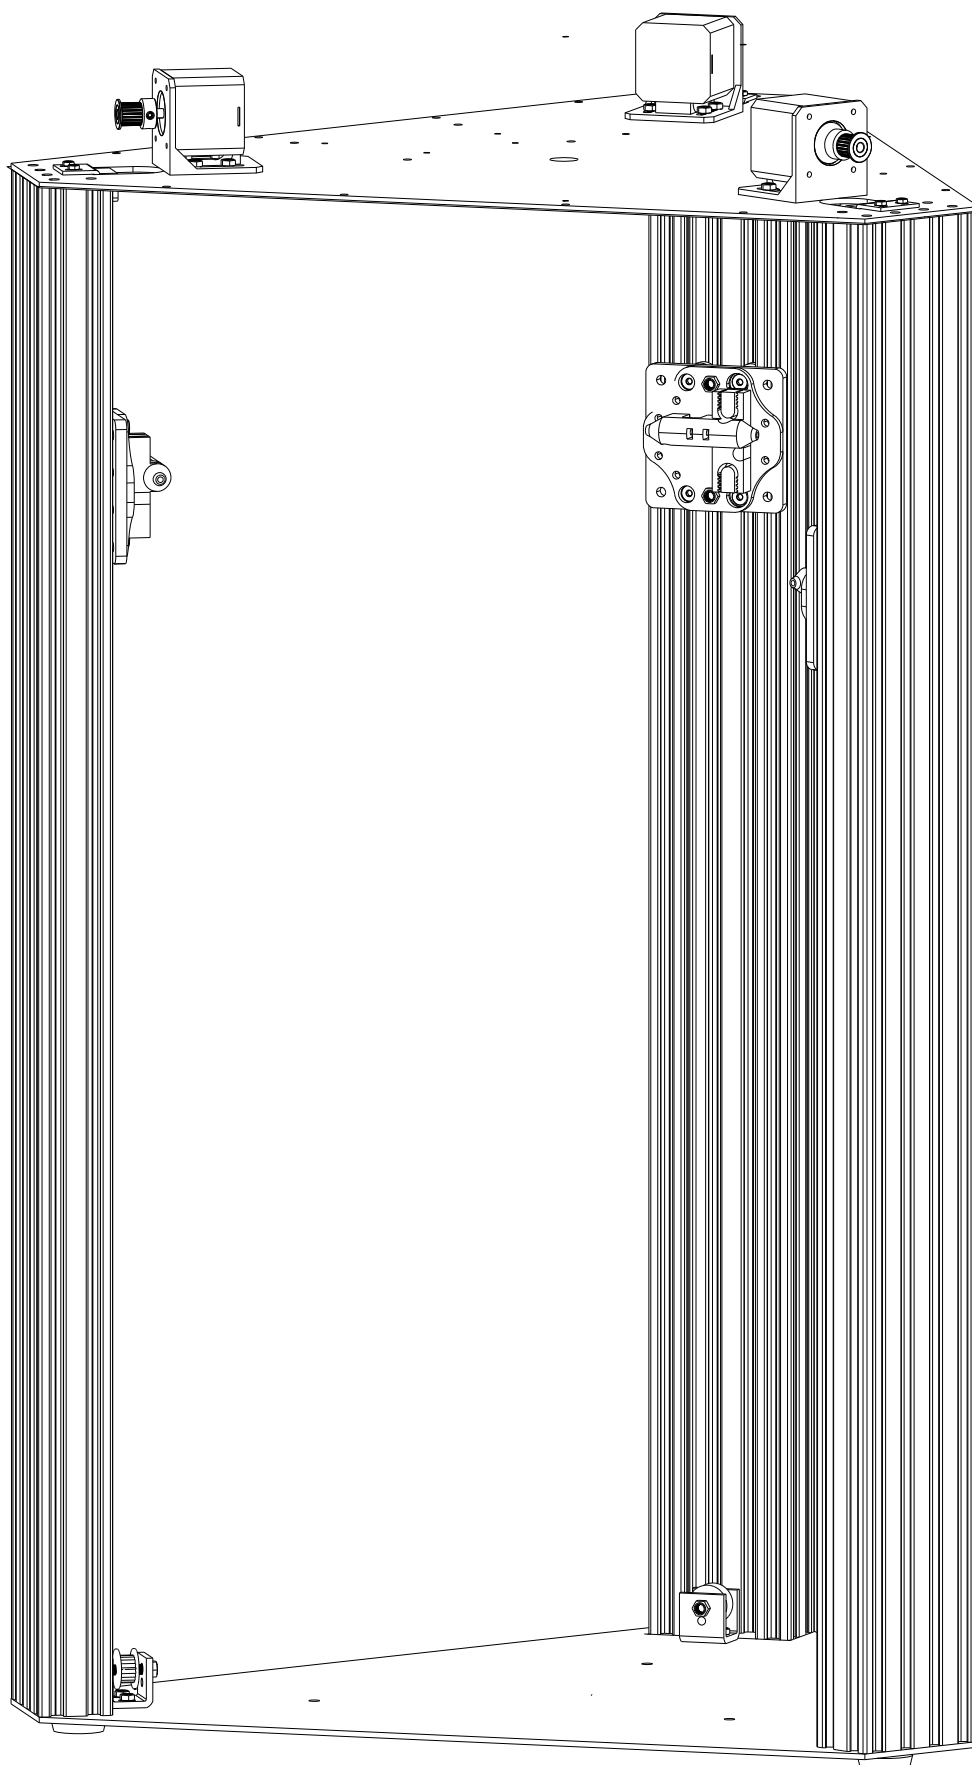


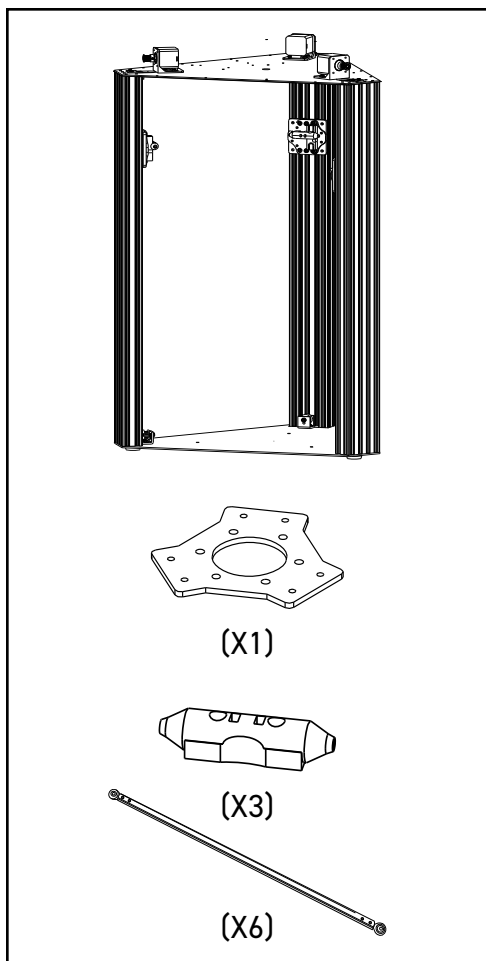


M3 10 + NUTS - 6 units

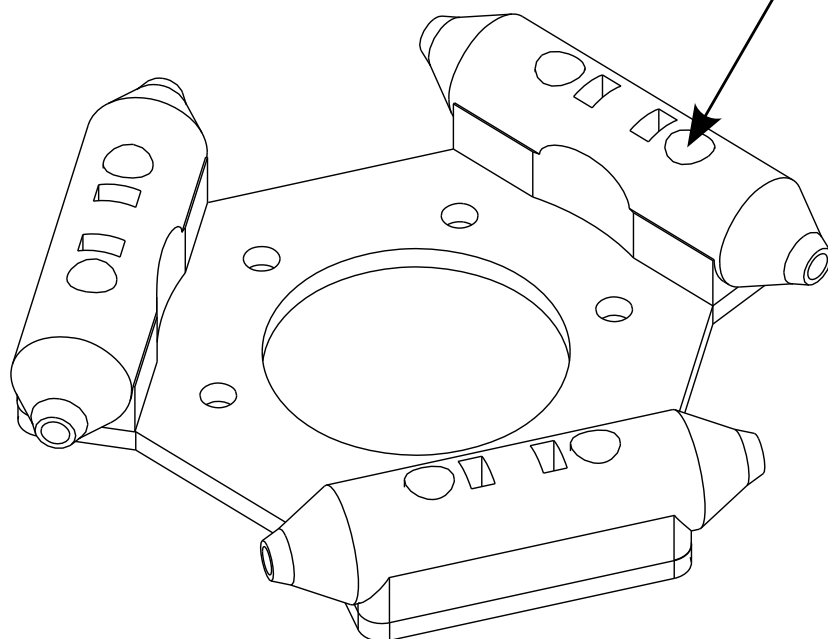




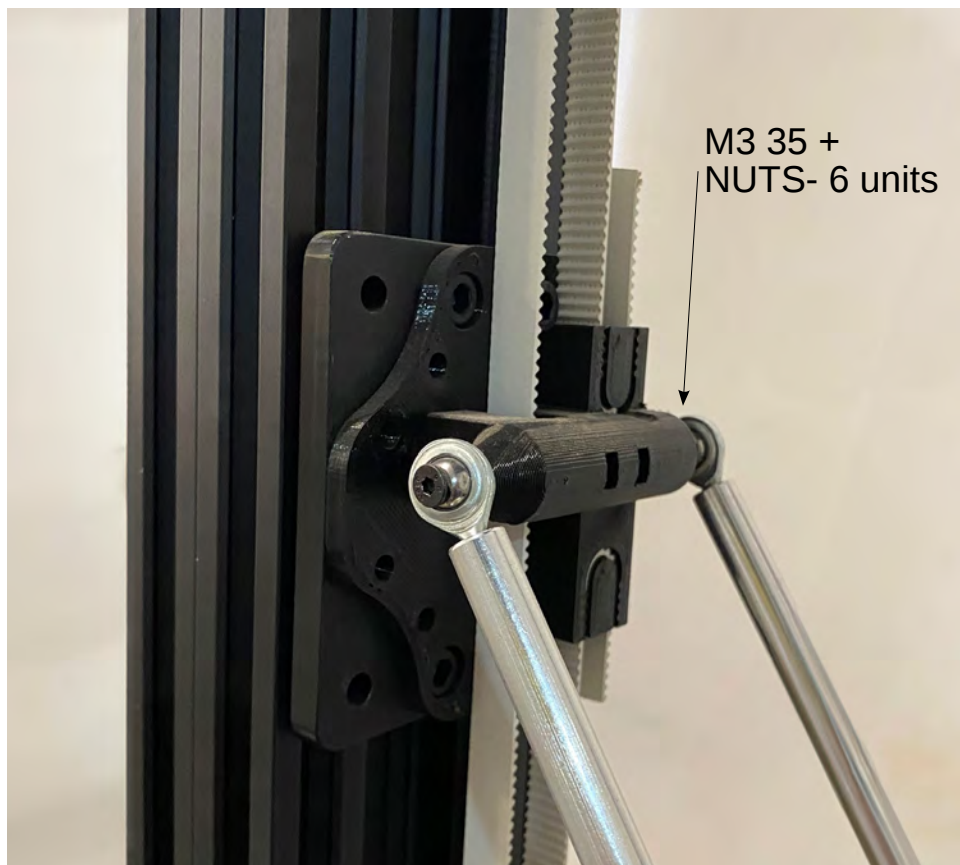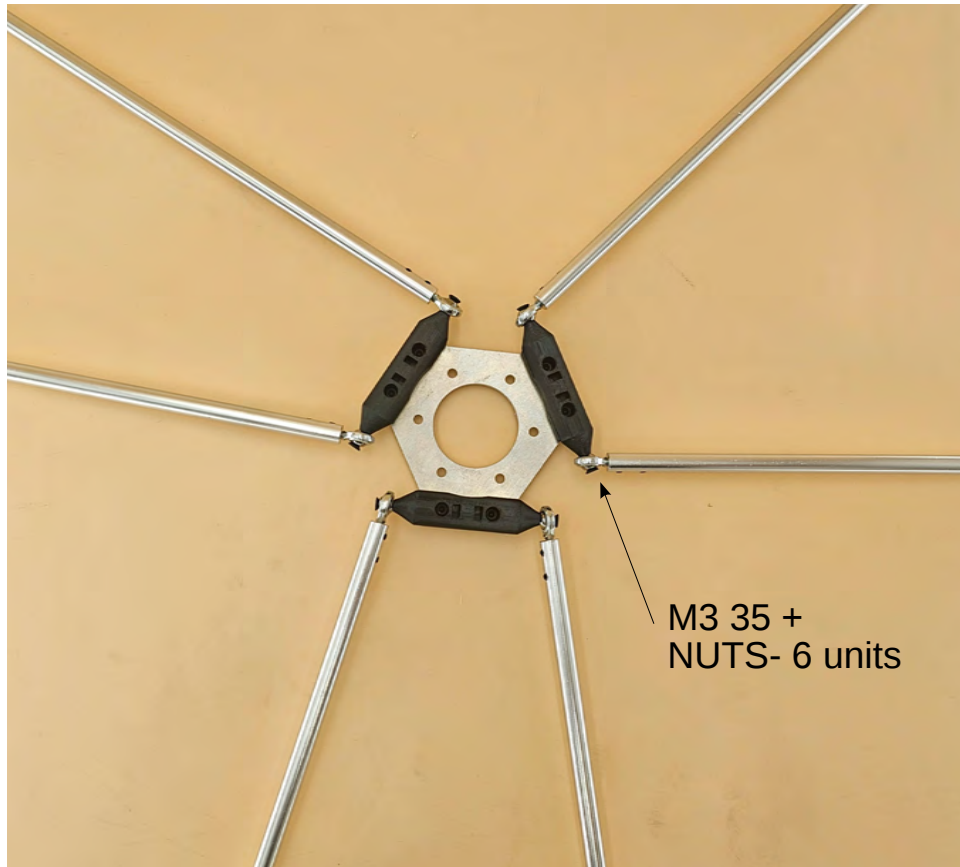

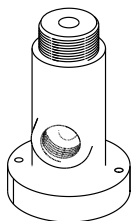

(X1)




(X1)



(X1)



(X1)



(X1)




(X1)




(X1)




(X1)


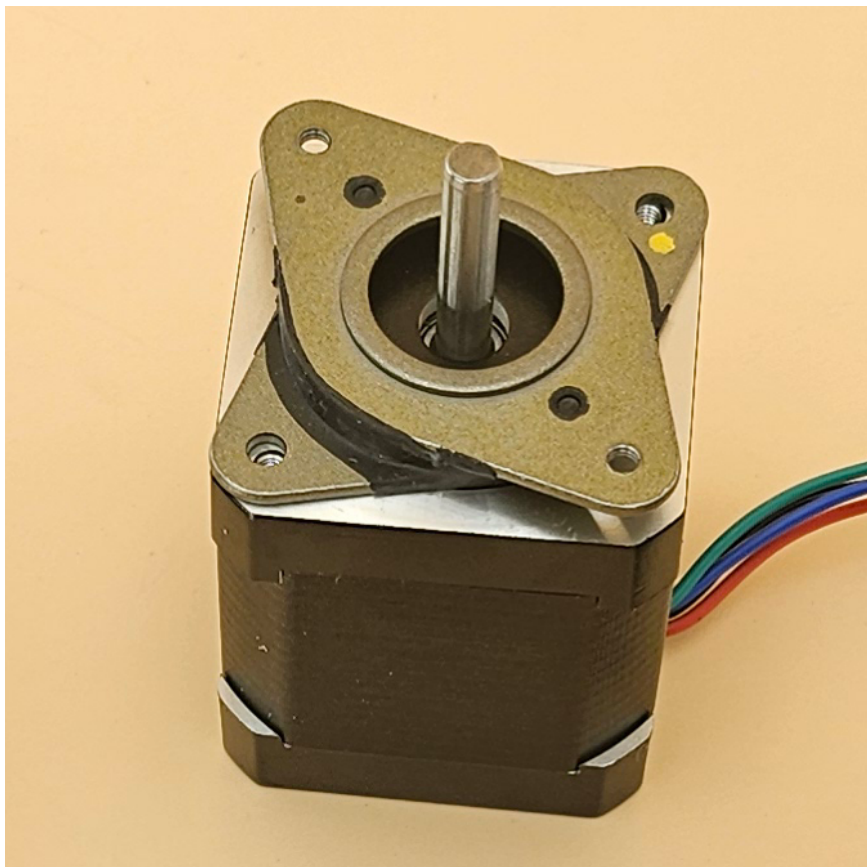



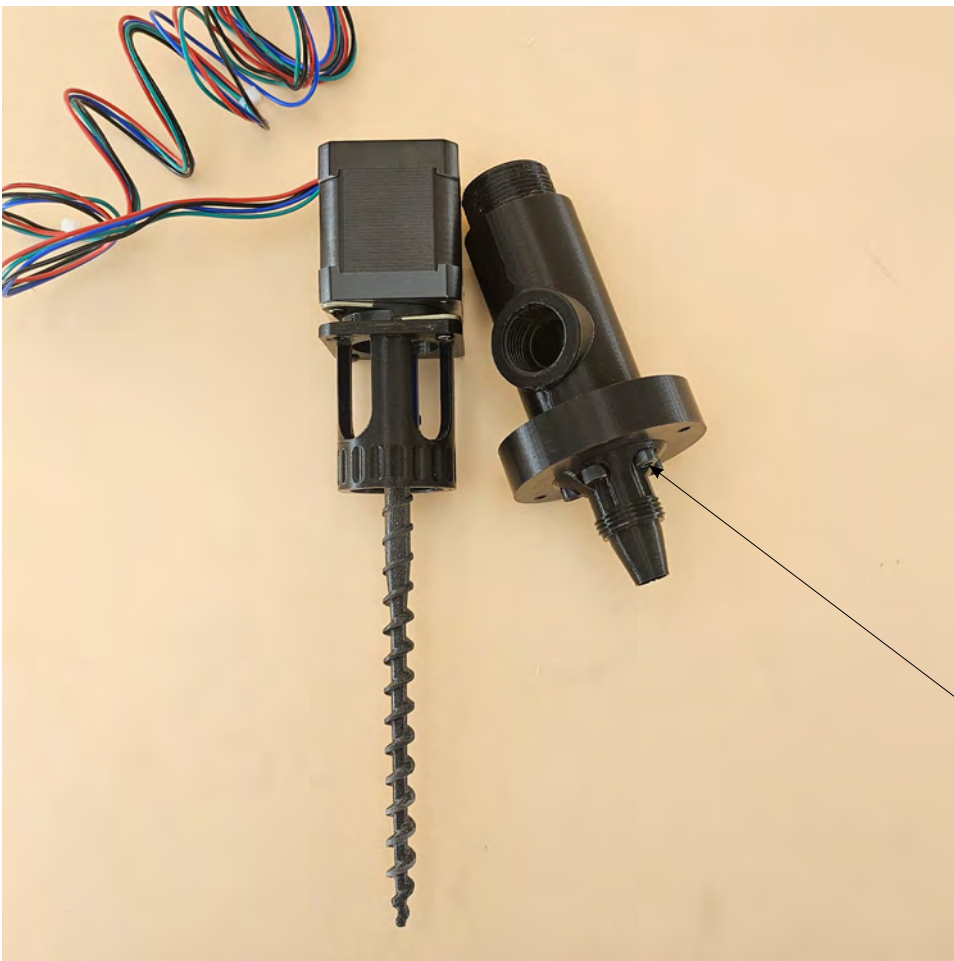


M4 6 - 5 units

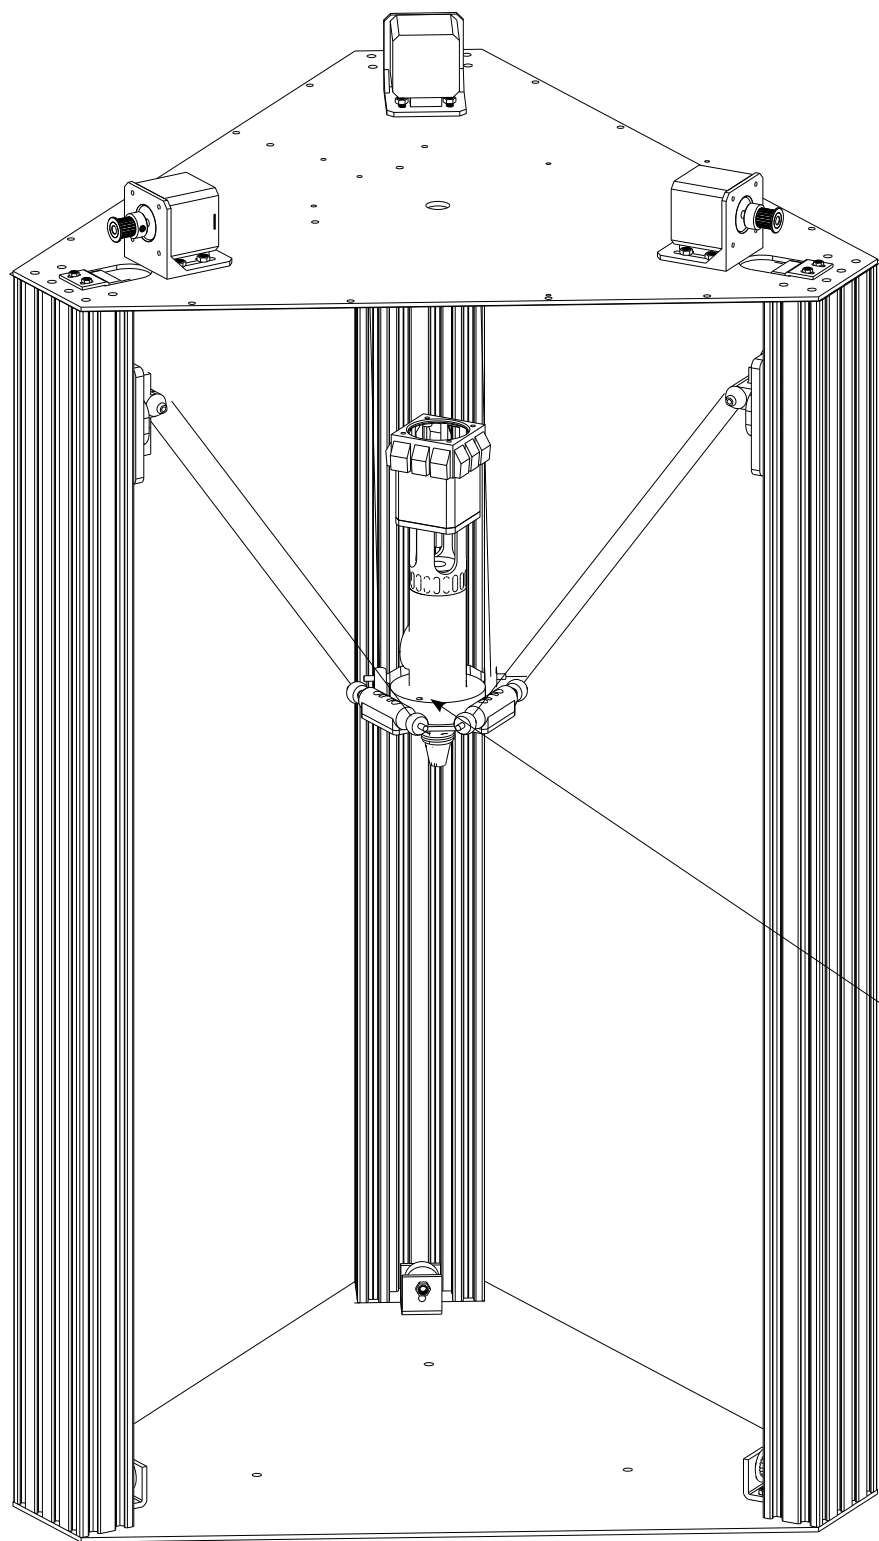


M4 25 +
BUTTERFLY NUTS - 2 units

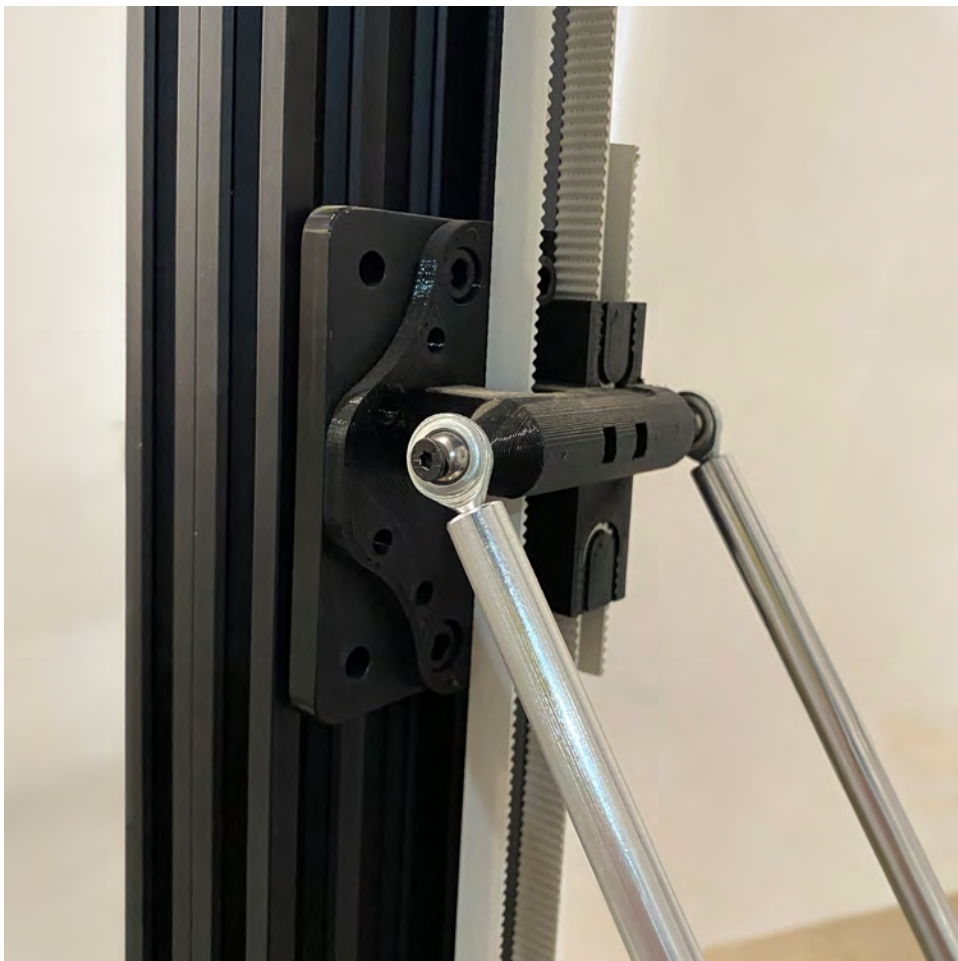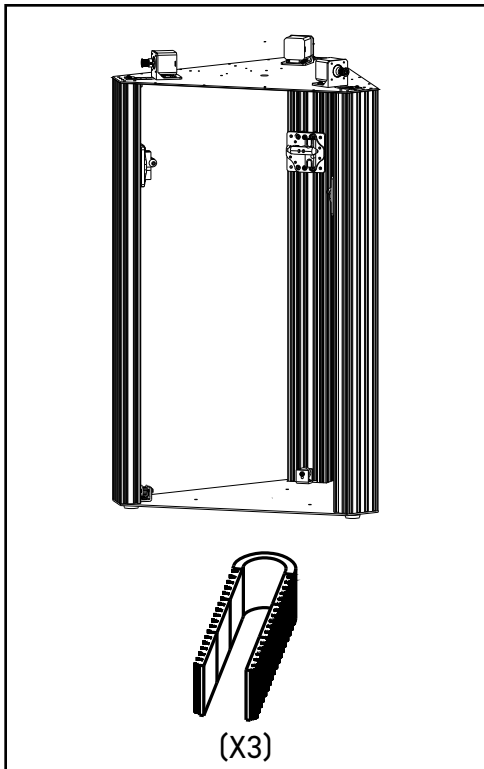

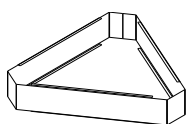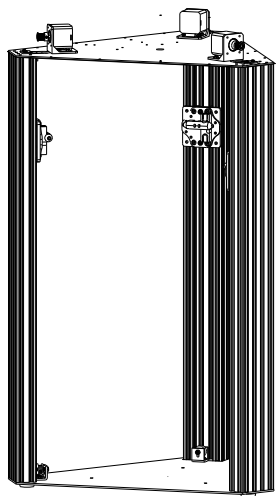

(X1)

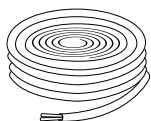



(X1)






(X1)



M4 10 + NUTS - 12 units

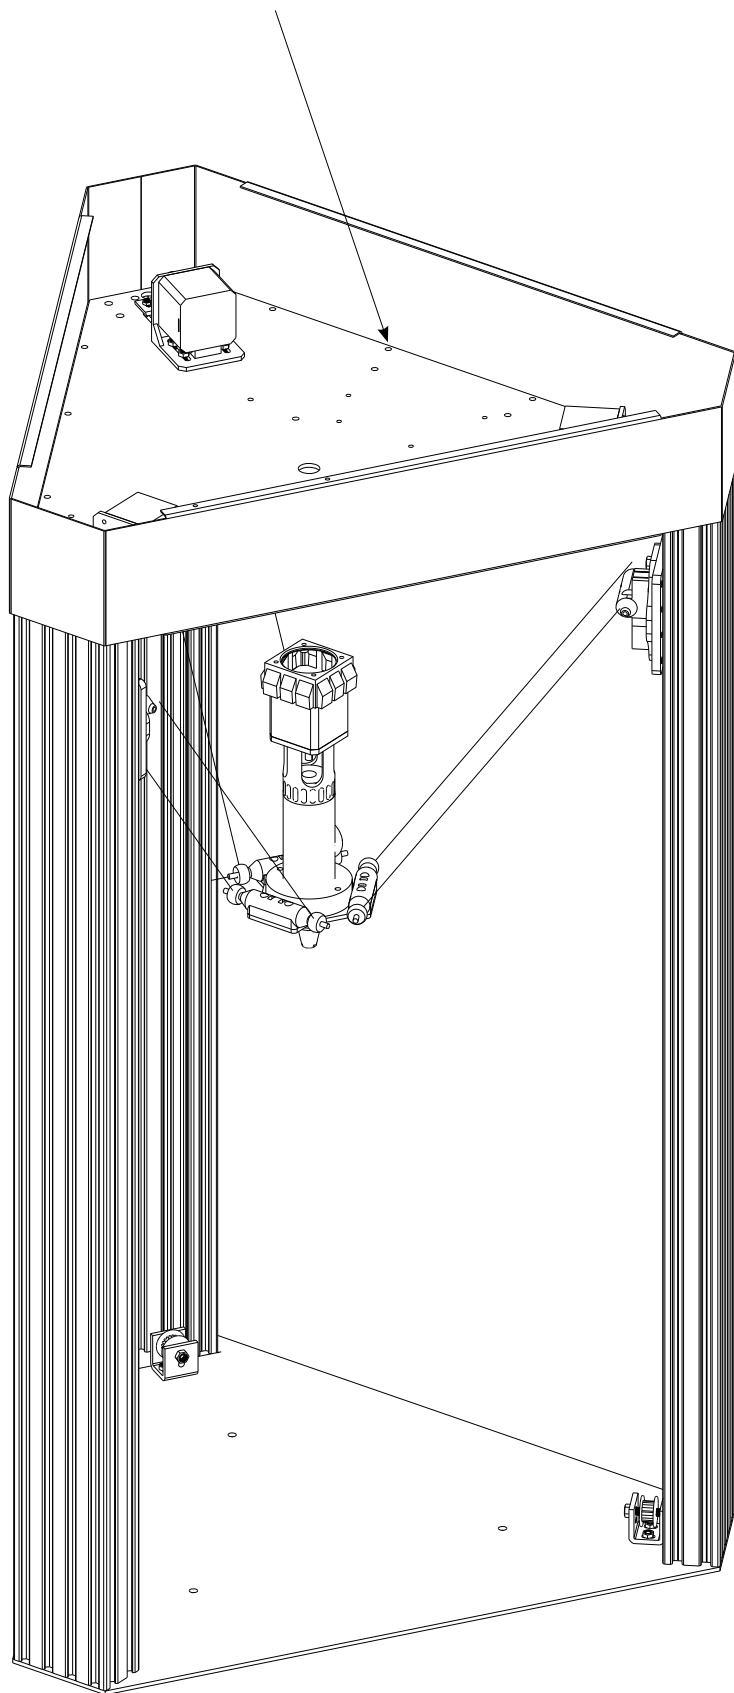

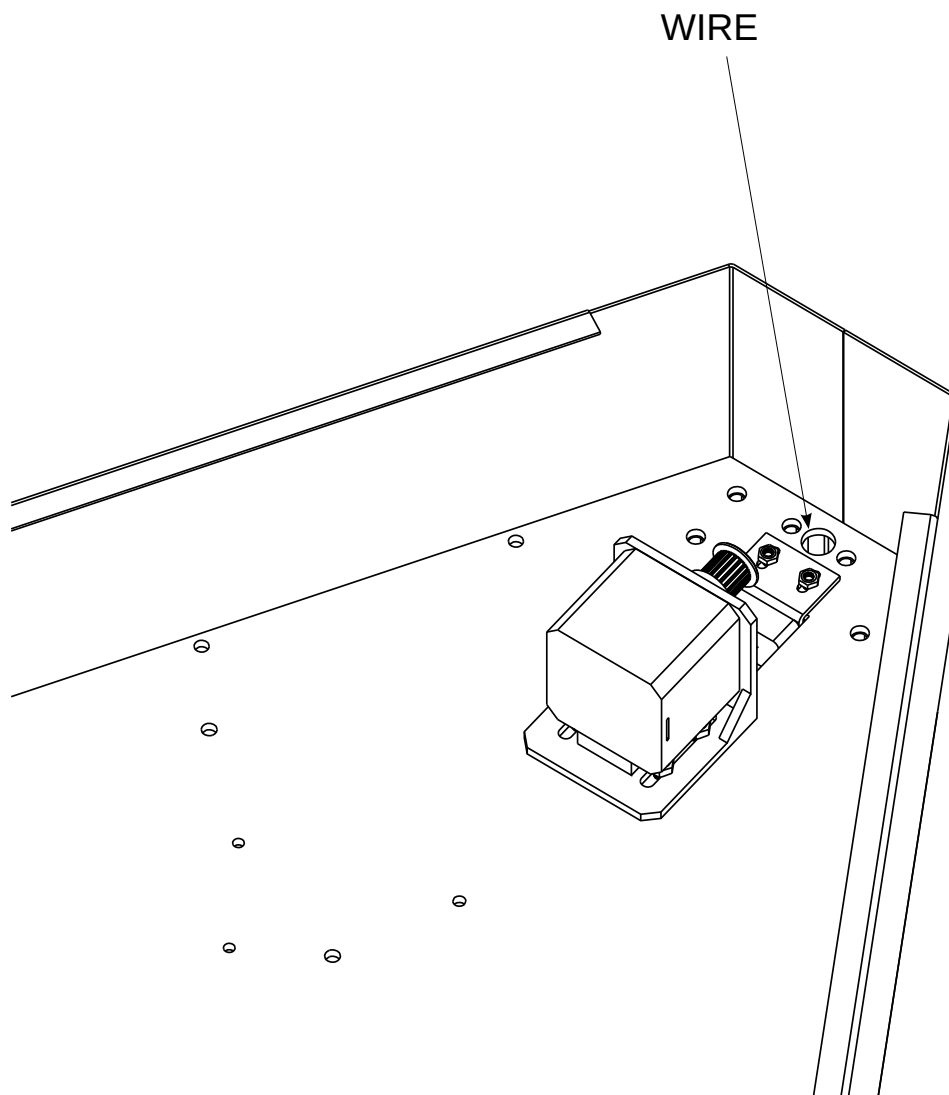

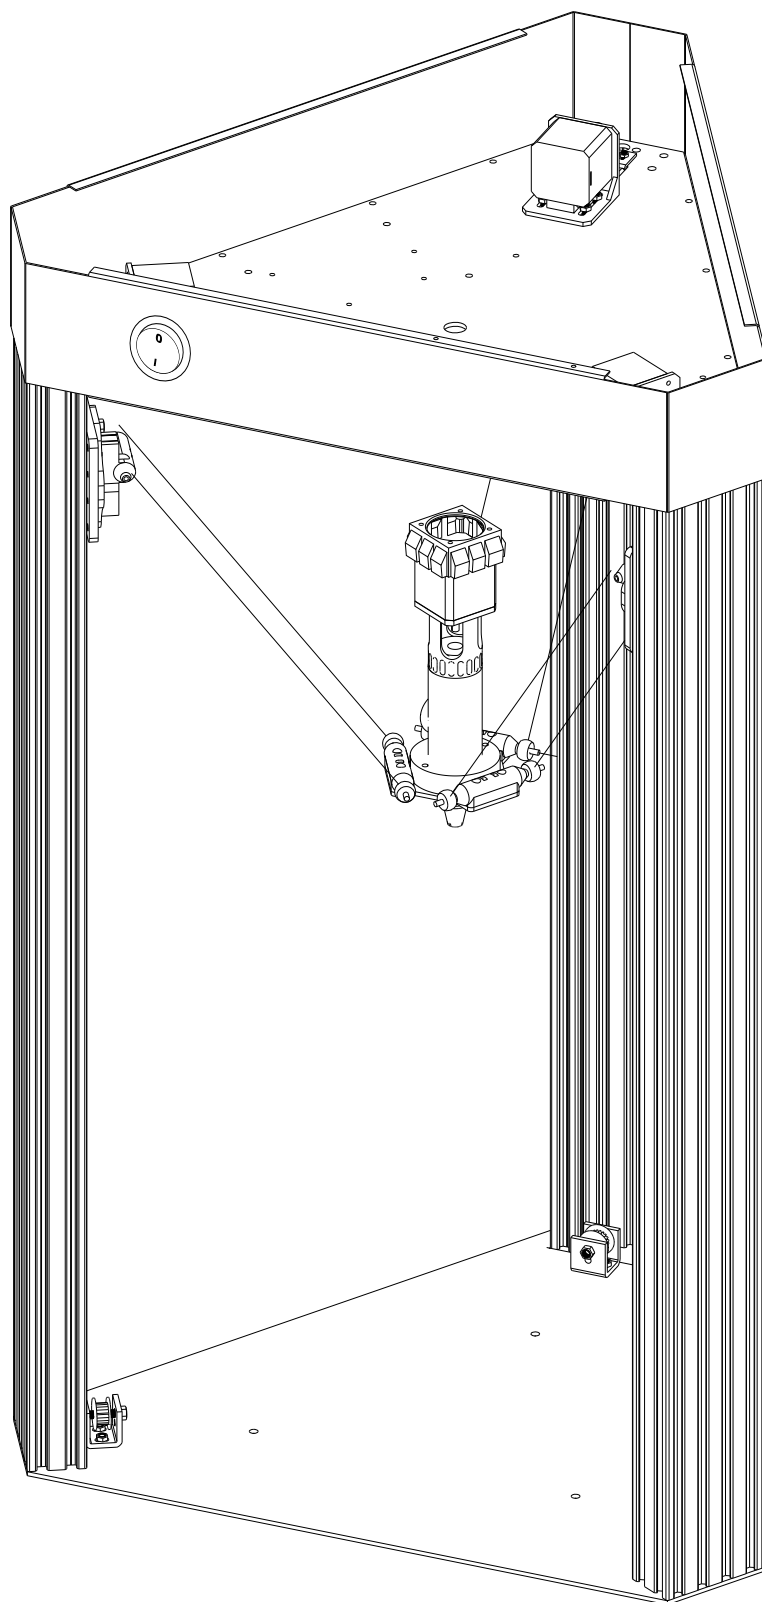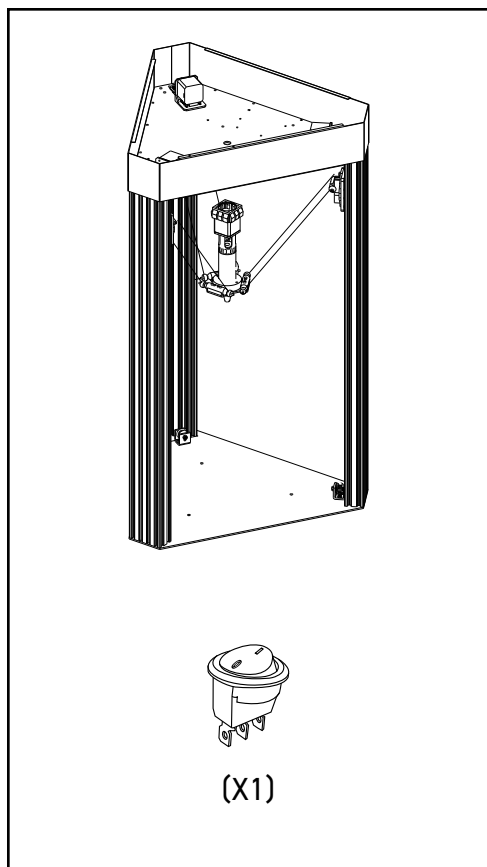


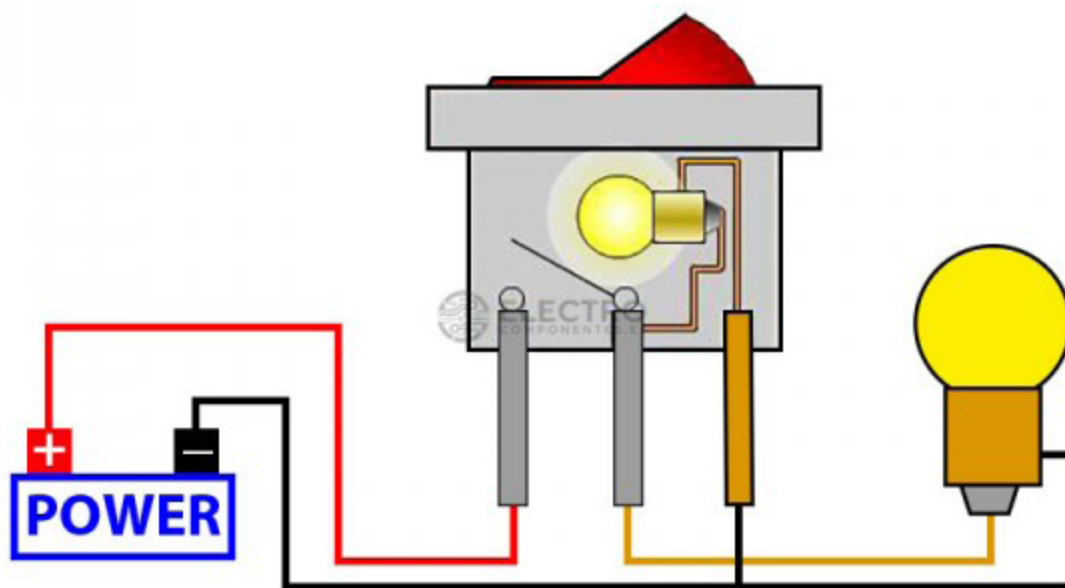

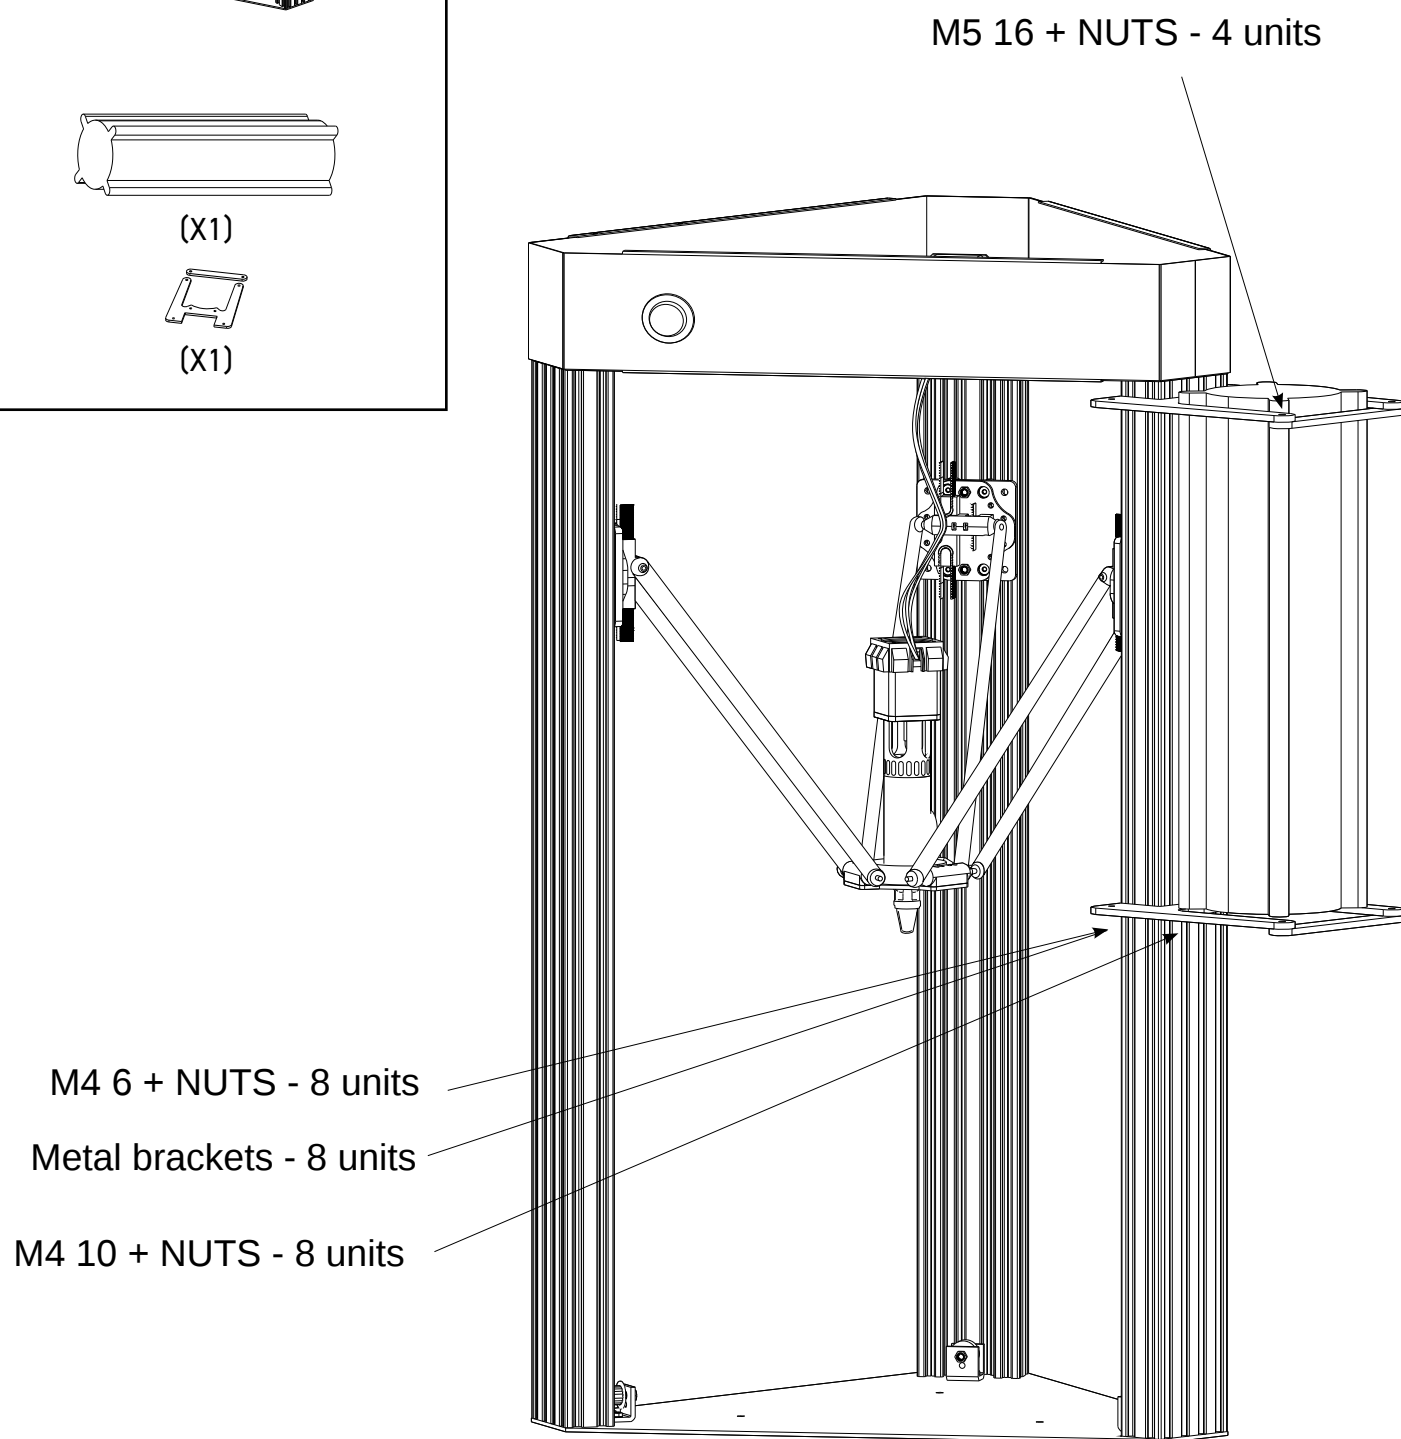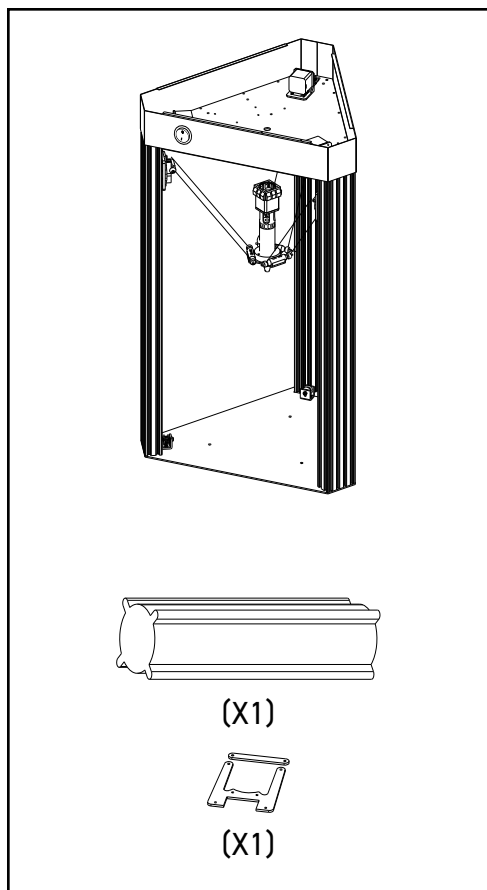


CAP.02


ELECTRÓNICA

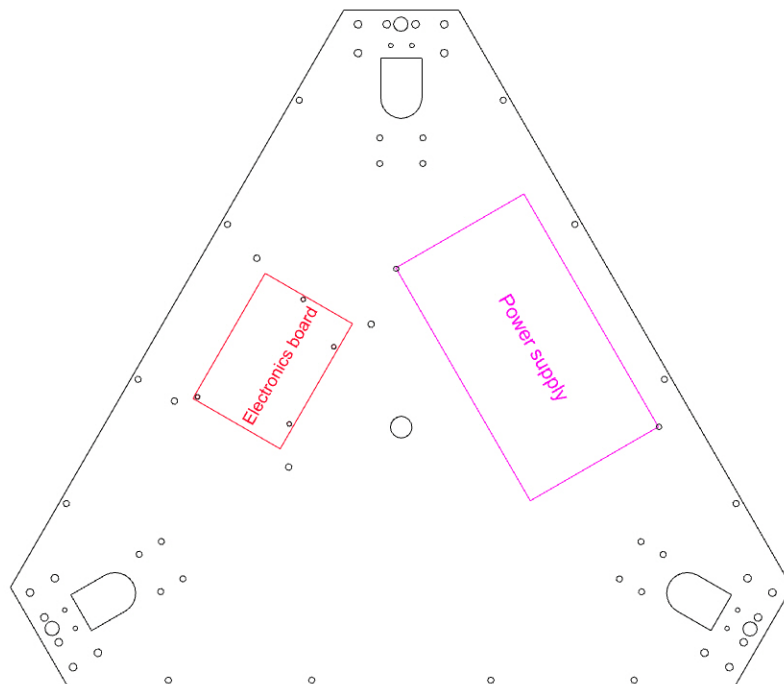



DIMENSIONS

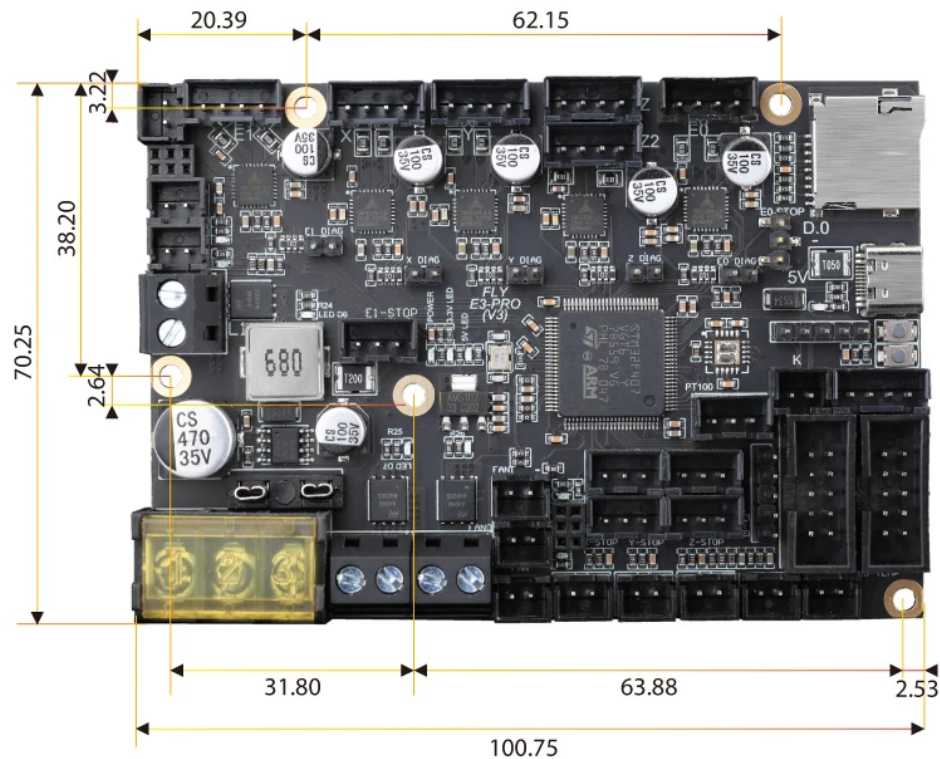


INTERFACE DIAGRAM

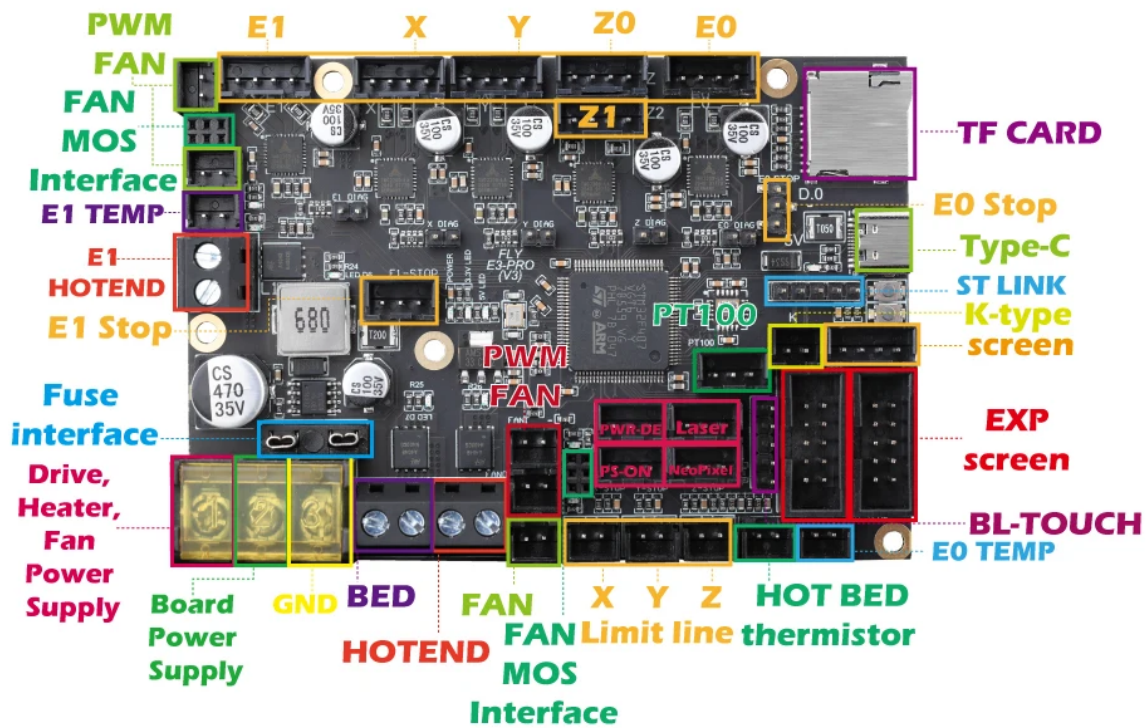

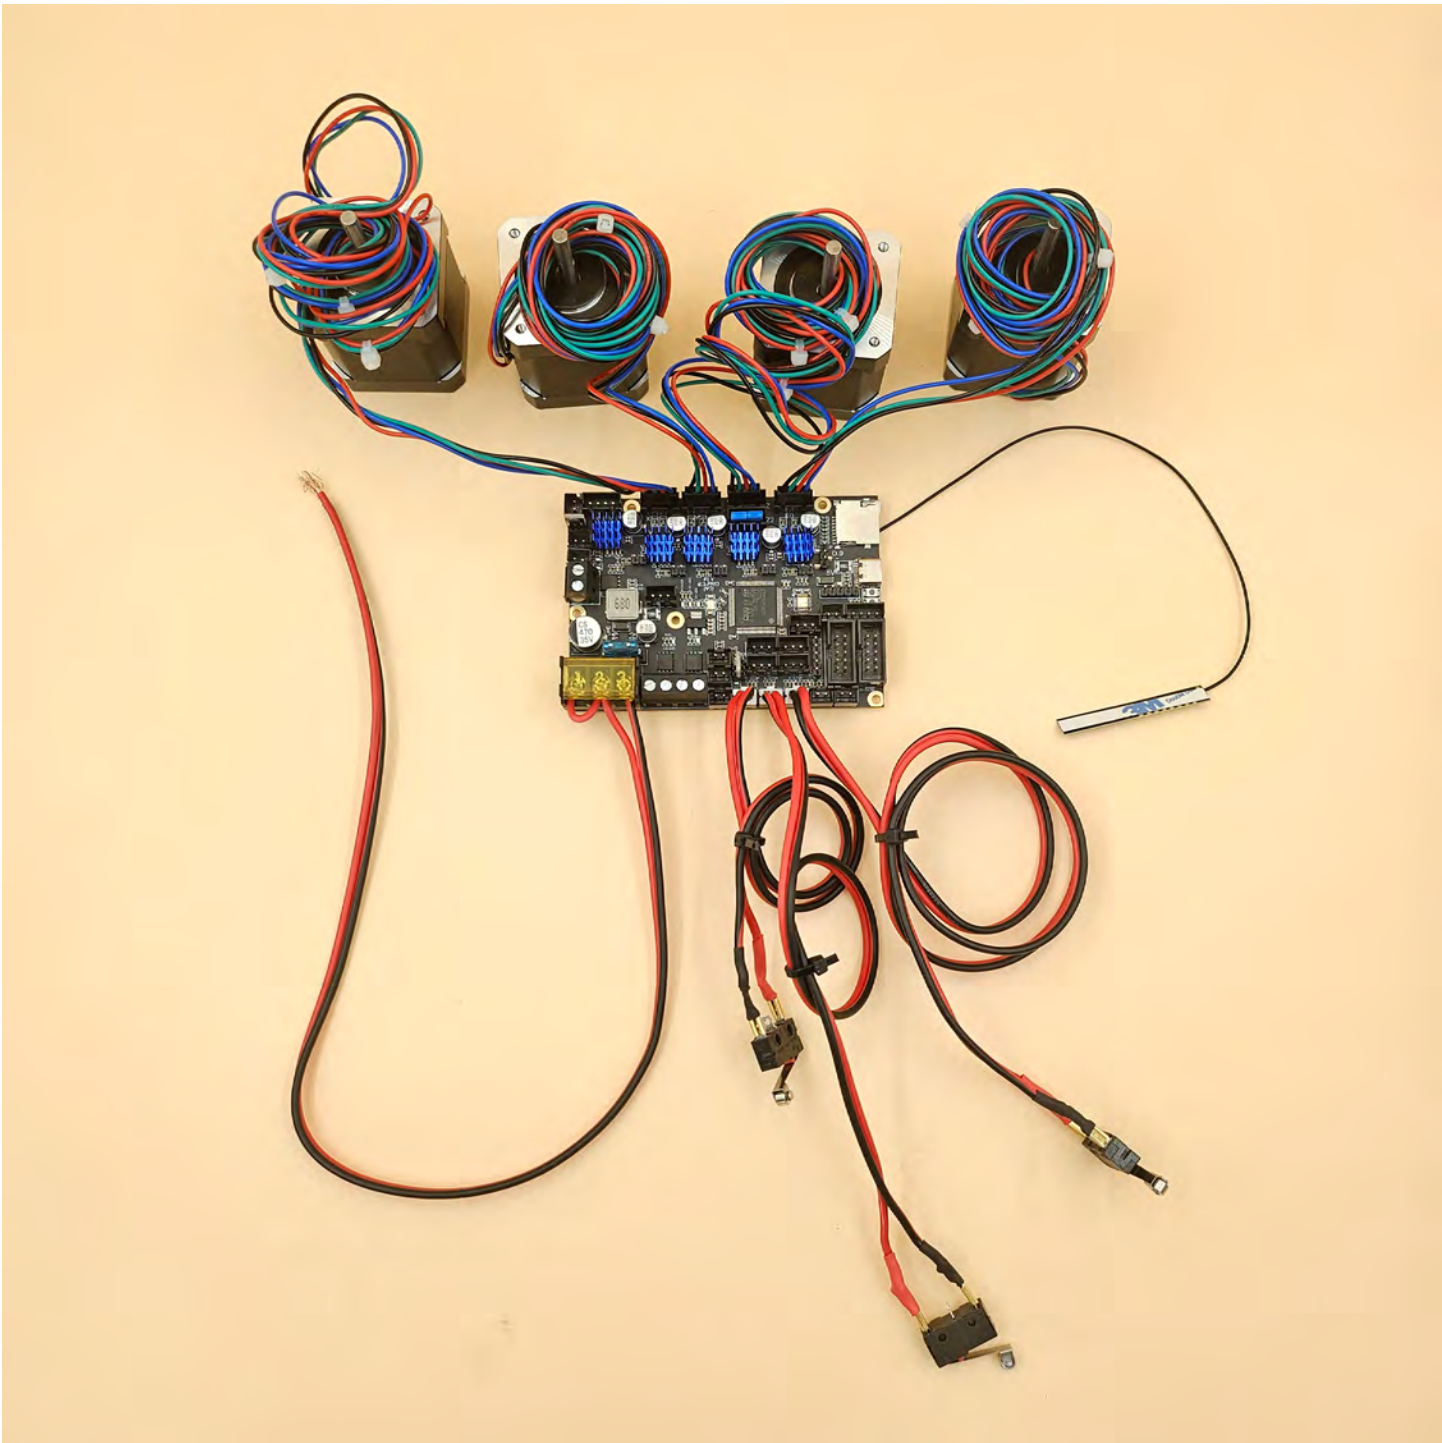

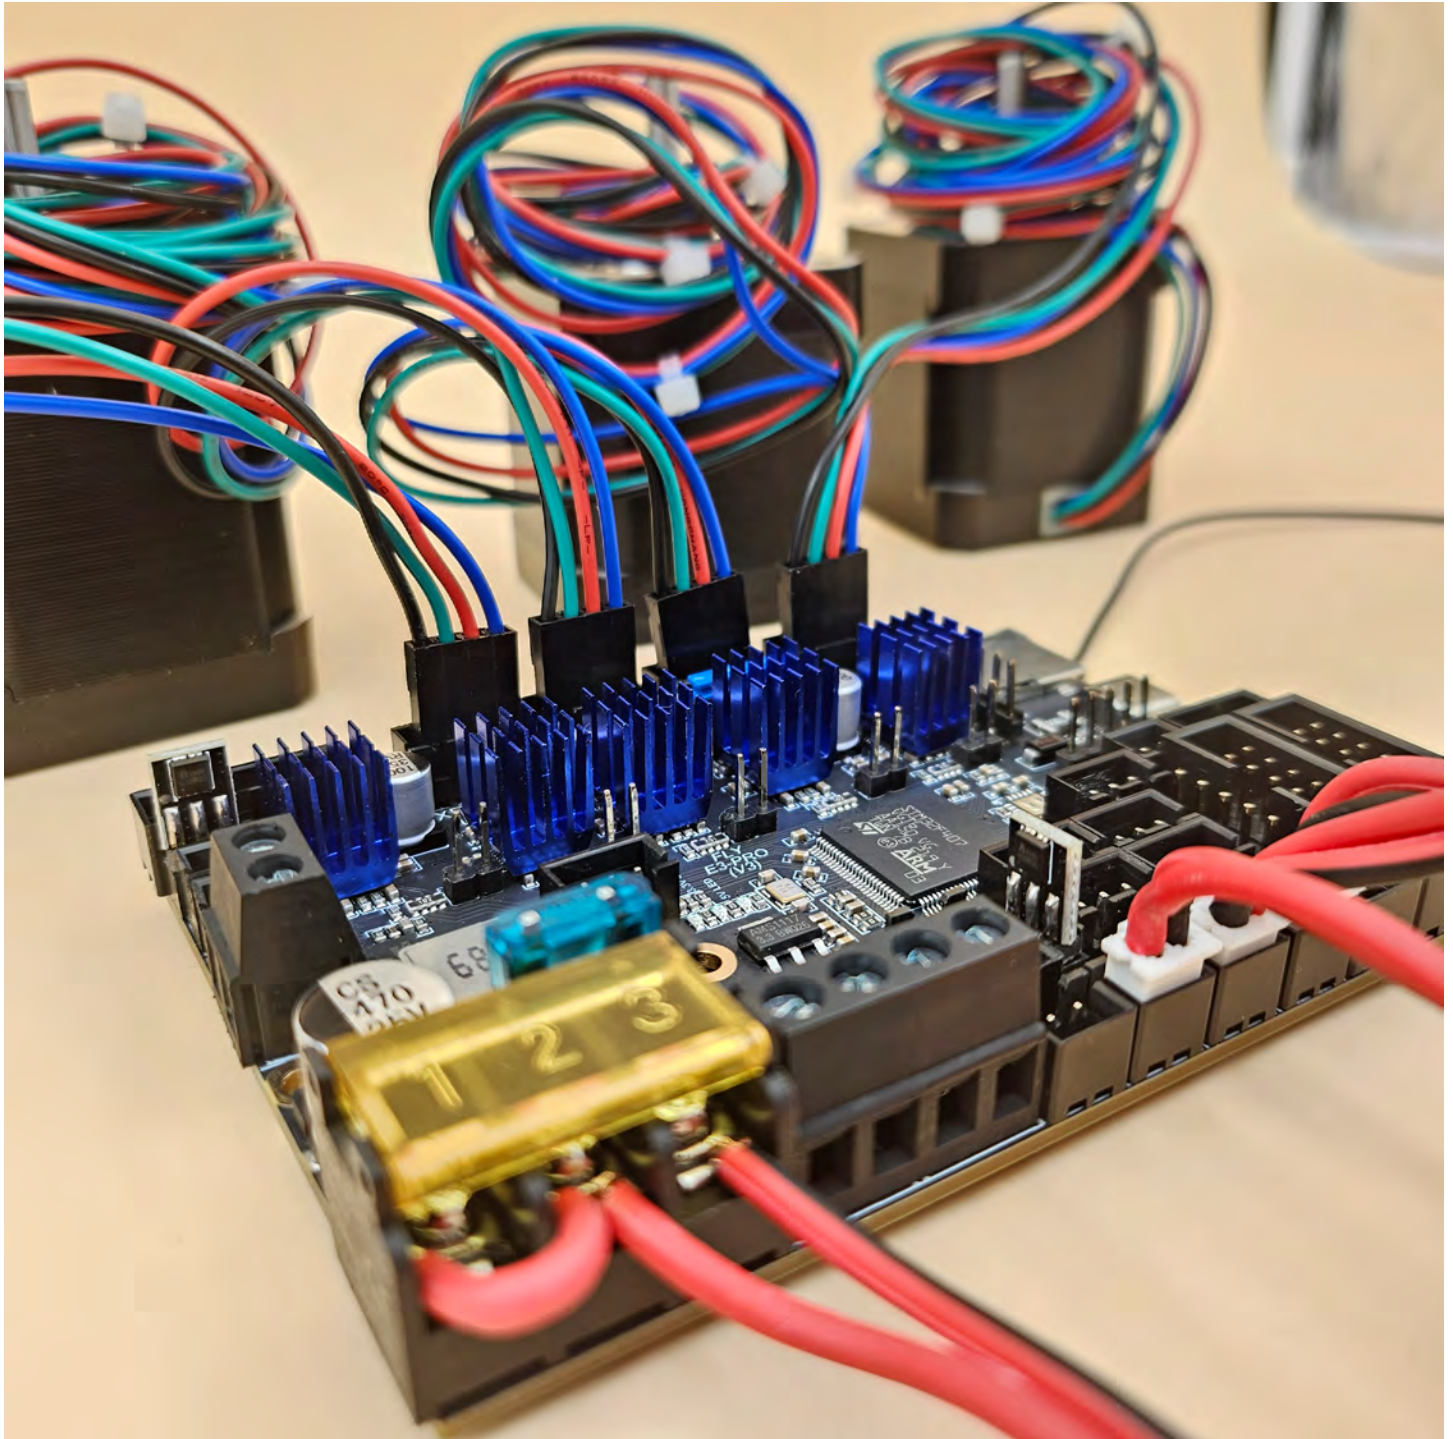

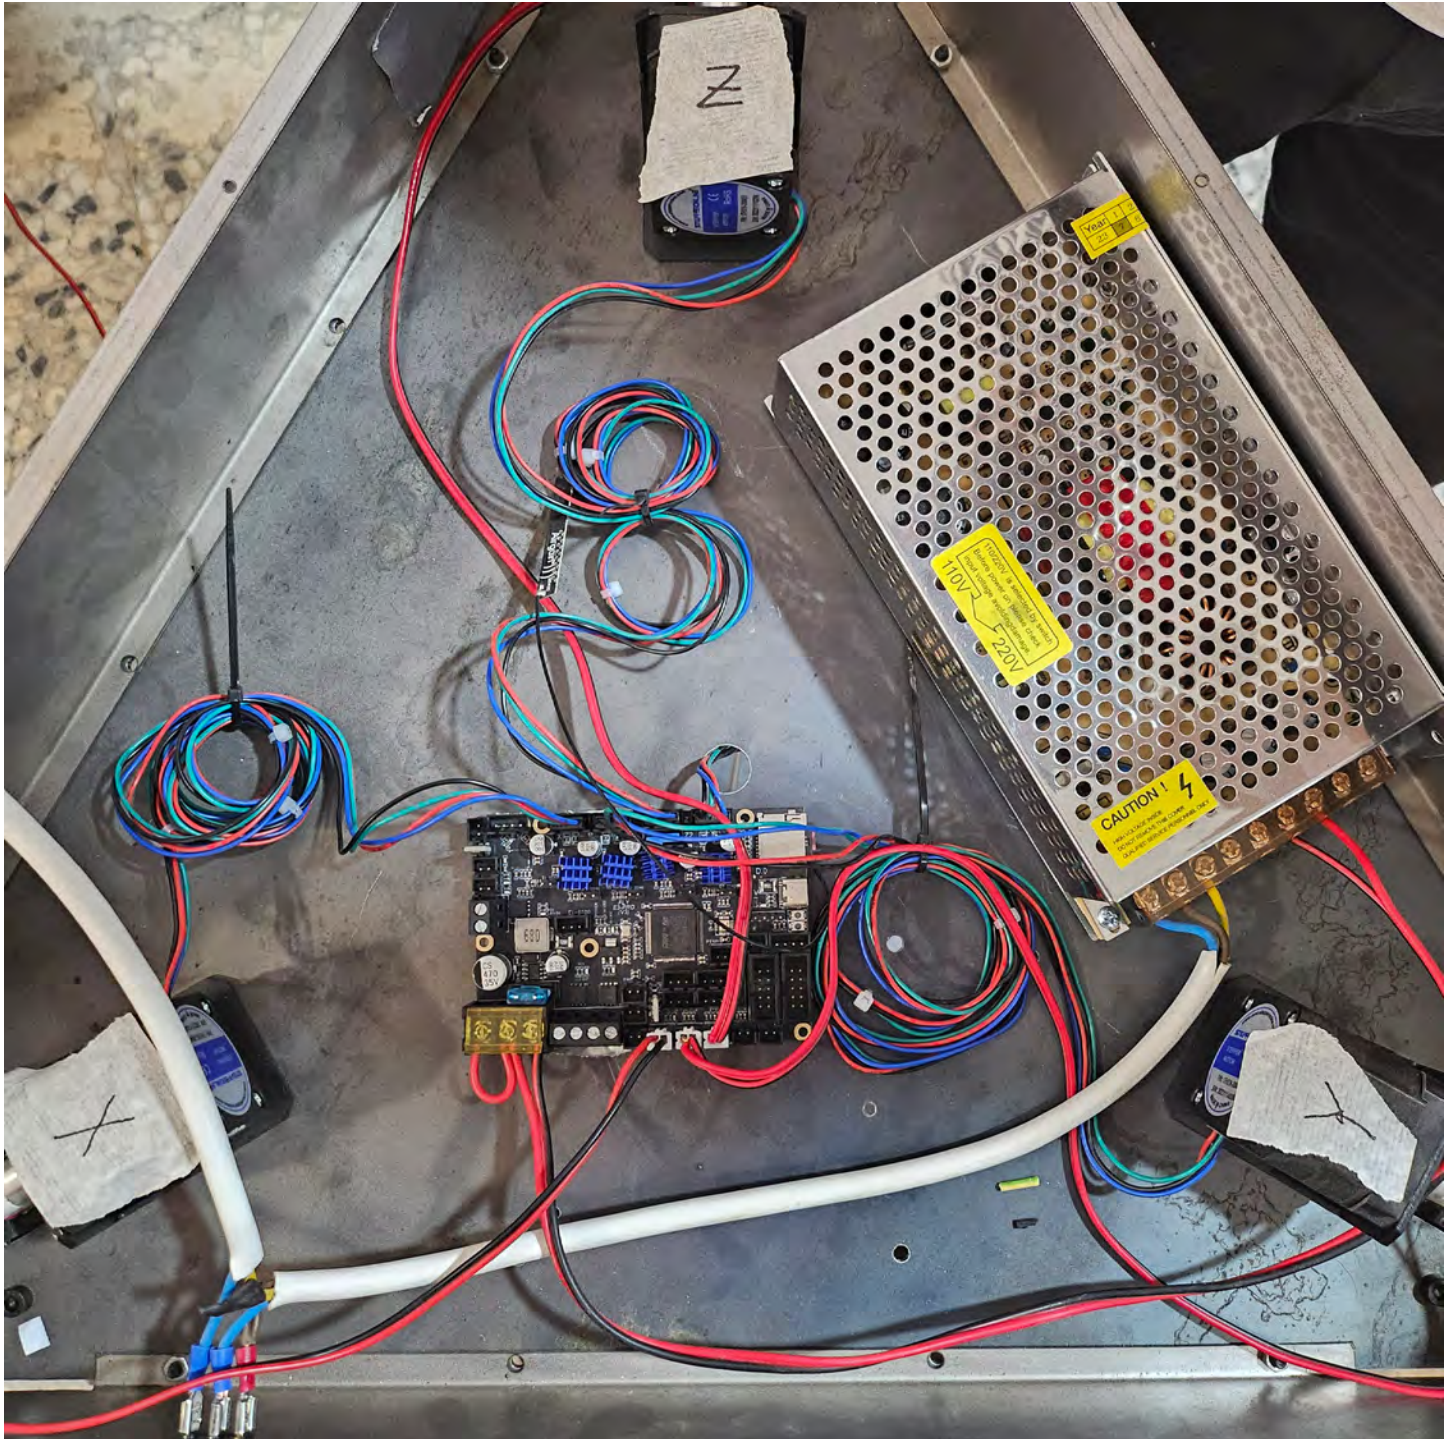

INICIACIÓN + MÁQUINA